

# MAGELLAN™


## K10V/H - User's Quick Reference Guide

### KEYPAD OVERVIEW

Partition 1 Status    Partition 2 Status

**Arm (red), Sleep (yel), Stay (grn):**  
On = Partition armed  
Off = Partition disarmed  
Flash = Exit Delay  
Fast Flash\* = Exit Delay (final 10 sec.)  
Fast Flash\* = Partition in alarm

\* Audible Indicators:  
Continuous beep = Alarm  
Variable beep = Fire alarm  
Intermittent beep = Beginning of exit delay  
Fast beep = Final 10 sec. of exit delay

 = Press once + [MASTER CODE] for Quick Menu Programming

**On = StayD Mode Enabled**

**Off Light (red):**  
On = Disarmed  
Off = System armed


**AC Light**  
On = Power on  
Off = Power off

**Zone Display:**  
Keys [1] to [0(10)] correspond to zones 1 to 10 respectively.  
Key Lit: Open or entry delay  
Key Flash: In alarm

**[TBL] Trouble display**  
On = Trouble(s) occurring

**[MEM] Alarm memory display**  
On = Alarm(s) occurred

**[BYP] Bypass programming**  
On = Zone(s) bypassed

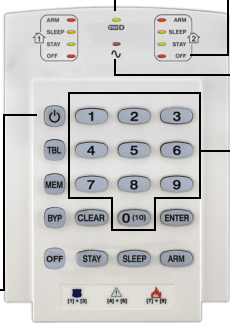

### ARMING AND DISARMING

**TO ARM  
WHEN LEAVING...**



**TO ARM  
WHEN STAYING...**



#### To Regular Arm:

1. Close all zones in the desired partition.
2. Press [ARM].
3. Enter your [ACCESS CODE]\*.

#### To Stay Arm:

1. Press the [STAY] key.
2. Enter your [ACCESS CODE]\*.

#### To Sleep Arm:

1. Press the [SLEEP] key.
2. Enter your [ACCESS CODE]\*.

**To Disarm:**  
[OFF] + [ACCESS CODE]\*

\* If needed, press button(s) corresponding to desired partition(s). For two partitions, press the other key after the confirmation beep.



## PANIC ALARMS

To send a silent or audible alarm to your Security Company, press and hold one of the button combinations listed for 3 seconds.

| Panic Alarm Type          | Button Combinations                                   |
|---------------------------|---|
| Police<br>Medical<br>Fire | Press [1] & [3]<br>Press [4] & [6]<br>Press [7] & [9] |

## TROUBLE DISPLAY

When a trouble condition occurs, the **[TBL]** key will illuminate.

1. Press the **[TBL]** key. The key will flash and number(s) corresponding to the trouble(s) will illuminate.
2. Read the corresponding explanation from the trouble list in the MG5000 User Guide.
3. Press the **[CLEAR]** key to exit.

## BYPASS PROGRAMMING

Bypassed zones remained unarmed when the partition is armed.

1. Press the **[BYP]** key.
2. Enter your **[ACCESS CODE]\***.
3. The corresponding key of all open zones will illuminate. Select the zone(s) you want to bypass by entering the one-digit zone number. The zone key will flash.
4. Press the **[ENTER]** key to save and exit.

## ALARM MEMORY DISPLAY

To view the alarms that occurred during the last armed period:

1. Disarm the system.
2. Press the **[MEM]** key.
3. The corresponding zone numbers that were in alarm the last time the system was armed will illuminate.
4. Press the **[CLEAR]** key to exit.

## KEYPAD SETTINGS

To mute the keypad:

Press and hold the **[CLEAR]** key for 6 seconds to enable or disable Keypad Muting.

To modify the backlight:

1. Press and hold the **[MEM]** key for 3 seconds.
2. The **[MEM]** key will illuminate.
3. Press the **[MEM]** key to set the desired backlight level.
4. Press **[CLEAR]** or **[ENTER]** to exit.

## CHIME PROGRAMMING

A Chime Enabled zone will advise you every time it is opened by causing your keypad to beep.

1. Press & hold the corresponding zone key for 3 seconds (Accept beep = Chime enabled, Fail beep = Chime disabled).

© Paradox Security Systems Ltd., 2005-2015.  
Magellan is a trademark or registered trademark of Paradox Security Systems (Bahamas) Ltd. and its affiliates in Canada, the United States and/or other countries. All rights reserved.

P ▲ R ▲ D O X™

PARADOX.COM

Printed in Canada 11/2015

K10VH-EQ04