

Accessories Overview

For use with Fireray®		5000	3000	50R/100R	3000 EExd
	5000-005 Universal Mounting Bracket For use with Fireray® 5000 and accessories. Bracket pivots for accurate alignment of beam detector and prisms.	•	•	•	
	5000-201 Adjustment Bracket Adjustment Bracket for Fireray® 5000 offering 360° rotation plus 130° adjustment.	•			
	5000-007 4 Prism Adaptor Plate Comes pre-drilled to mount 4 prisms. Designed to mount on the Universal Mounting Bracket 5000-005 or the Fireray® 3000 Adjustment Bracket 3000-201. Prisms and Brackets are ordered separately.	•	•	•	
	5000-008 Single Prism Adaptor Plate Comes pre-drilled to mount prism. Designed to mount on the Universal Mounting Bracket 5000-005 or the Fireray® 3000 Adjustment Bracket 3000-201. Prisms and Brackets are ordered separately.	•	•	•	
	5000-006 Prism Wall Bracket Reflector Wall Bracket comes pre-drilled to mount I (up to 50m) or 4 (50 to 100m) prisms. Hole pattern on side mounting flange similar to Unistrut. Prisms ordered separately.	•		•	
	3000-201 Adjustment Bracket Adjustment Bracket for Fireray® 3000 offering 360° rotation plus 180° adjustment; can also be used with Prism Adaptor Plates.		•	•	
	3000-202 Flush Mount Plate Flush Mount Plate for Fireray® 3000 Fireray (requires the F3000 base PC.		•		
	1000-019 Protective Wire Cage Fireray® 5000 Controller Protective Wire Cage. Made to mount to a flat surface. Includes 4 Philips Head screws and mounting hardware.	•			

Accessories Overview



For use with Fireray®		5000	3000	50R/100R	3000 EExd
	1000-018 Protective Wire Cage Fireray® 5000, 3000 Detector Protective Cage. Made to mount to a flat surface. Includes 4 Philips Head screws and Fireray Wire mounting hardware.	•	•		
	1000-020 Protective Wire Cage Fireray® 50/100 R Detector Protective Wire Cage. Made to mount to a flat surface. Includes 4 Philips Head screws and mounting hardware.			•	
Ī	5000-014 Universal Ceiling Mount For use with Fireray® 5000, 3000 and 50R/100R prism and Universal Bracket.	•	•	•	
	0061-001-01 EExd Wall Bracket Surface mount wall bracket for use with Fireray 3000 EExd.				•
	5000-204 Anti-Condensation Heater 5000-204 Anti-Condensation Heater Anti-Condensation Heater and Bracket for use with Fireray® 5000 detector head or detector head and alignment bracket. Detector head not included.	•			
74	3000-204 Anti-Condensation Heater Anti-Condensation Heater and Bracket for use with Fireray® 3000 Transmitter/Receiver or Transmitter/Receiver and universal bracket. Transmitter/Receiver not included.		•		
	5100-204 Anti-Condensation Heater Anti-Condensation Heater and Bracket for use with Fireray 50R/100R detector or detector and alignment bracket. Detector not included.			•	
	5000-205 Anti-Condensation Prism Heater Anti-Condensation Prism Heater and Bracket for use with Fireray® 5000 and 50R/100R prism(s).	•		•	



FFE Limited 9 Hunting Gate, Hitchin Hertfordshire, SG4 0TJ UK

t +44 (0) 1462 444 740 f +44 (0) 1462 444 789

e sales@ffeuk.com

w www.ffeuk.com

Individual detailed data sheets can be downloaded from www.ffeuk.com.