



# VIVOTEK Thermal & Optical Bi-Spectrum Network Camera User Manual

TB9333-E

**Issue**

**V1.0**

**Date**

**2024-09-03**




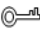

# Precautions

## Precautions

Fully understand this document before using this device, and strictly observe rules in this document when using this device. If you install this device in public places, provide the tip "You have entered the area of electronic surveillance" in an eye-catching place. Failure to correctly use electrical products may cause fire and severe injuries. To prevent accidents, carefully read the following context:

## Symbols

This document may contain the following symbols whose meanings are described accordingly.

Symbol	Description
 <b>DANGER</b>	It alerts you to fatal dangers which, if not avoided, may cause deaths or severe injuries.
 <b>WARNING</b>	It alerts you to moderate dangers which, if not avoided, may cause minor or moderate injuries.
 <b>CAUTION</b>	It alerts you to risks. Neglect of these risks may cause device damage, data loss, device performance deterioration, or unpredictable results.
 <b>TIP</b>	It provides a tip that may help you resolve problems or save time.
 <b>NOTE</b>	It provides additional information.



### **DANGER**

To prevent electric shocks or other dangers, keep power plugs dry and clean.



### **WARNING**

- Strictly observe installation requirements when installing the device. The manufacturer shall not be held responsible for device damage caused by users' non-conformance to these requirements.
- Strictly conform to local electrical safety standards and use power adapters which are marked with the LPS standard when installing and using this device. Otherwise, this device may be damaged.
- Use accessories delivered with this device. The voltage must meet input voltage requirements for this device.

- If this device is installed in places with unsteady voltage, ground the device to discharge high energy such as electrical surges in order to prevent the power supply from burning out.
- When this device is in use, ensure that no water or any liquid flows into the device. If water or liquid unexpectedly flows into the device, immediately power off the device and disconnect all cables (such as power cables and network cables) from this device.
- Do not place the thermal imaging camera and unpackaged products at a radiation source with a high intensity regardless of whether the device is in the normal power-on state, for example, the sun, laser, and electric arc welder, and place the thermal imaging camera and unpackaged products against objects with a high heat source, for example, the sun. Otherwise, the accuracy of the thermal imaging camera will be affected. In addition, the detector in the thermal imaging camera may be permanently damaged.
- If this device is installed in places where thunder and lightning frequently occur, ground the device nearby to discharge high energy such as thunder strikes in order to prevent device damage.



### CAUTION

- Unless otherwise specified in the user manual, do not use the thermal imaging camera in an environment with the temperature lower than  $-20^{\circ}\text{C}$  ( $-4^{\circ}\text{F}$ ) or higher than  $60^{\circ}\text{C}$  ( $+140^{\circ}\text{F}$ ). Otherwise, the images displayed by the thermal imaging camera are abnormal and the device may be damaged if working beyond the temperature range for a long period.
- During the outdoor installation, prevent the morning or evening sunlight incidence to the lens of the thermal imaging camera. The sun shield must be installed and adjusted according to the angle of the sunlight illumination.
- Avoid heavy loads, intensive shakes, and soaking to prevent damages during transportation and storage. The warranty does not cover any device damage that is caused during secondary packaging and transportation after the original packaging is taken apart.
- This device is a static sensitivity device. Improper static may damage the thermal imaging camera. ESD protection measures and reliable grounding must be well prepared for device installation and uninstallation.
- Protect this device from fall-down and intensive strikes, keep the device away from magnetic field interference, and do not install the device in places with shaking surfaces or under shocks.
- Use a soft and dry cloth to clean the device body. In case that the dirt is hard to remove, use a dry cloth dipped in a small amount of mild detergent and gently wipe the device, and then dry it again. Pay special attention to the front window of the thermal imaging camera because this is precision optics. If the front window has water spots, use a clean and soft cloth moistened with water to wipe it. If the front window needs further cleaning, use a soft cloth dampened with isopropyl alcohol or detergent. Improper cleaning can cause damage to the device.
- The lens window of the thermal imaging camera is designed to be applicable to an outdoor environment. The window is coated with durable coating material but may

require frequent cleaning. When you found lens image degradation or excessive accumulation of pollutants, you should clear up the window in a timely manner. Exercise caution when you use this device in severe sandstorm (such as deserts) or corrosive environments (such as offshore). Improper use may cause surface coating off.

- Follow the installation instructions provided in this document when installing the device.
- Keep the device away from heat sources such as radiators, electric heaters, or other heat equipment.
- Keep the device away from moist, dusty, extremely hot or cold places, or places with strong electric radiation.
- If the device is installed outdoors, take insect- and moisture-proof measures to avoid circuit board corrosion that may affect monitoring.

# Table of Contents

---

<b>Precautions</b> .....	<b>II</b>
<b>Table of Contents</b> .....	<b>V</b>
<b>1 Product Overview</b> .....	<b>8</b>
1.1 About Product.....	8
1.2 Dimension .....	8
1.2.1 Without Conduit Box .....	8
1.2.2 With Conduit Box .....	11
1.3 Installation.....	13
1.3.1 Without Conduit Box .....	13
1.3.2 With Conduit Box .....	14
1.4 Cable Connection .....	16
<b>2 Quick Configuration</b> .....	<b>19</b>
2.1 Login and Logout .....	19
2.2 Homepage Layout .....	20
2.3 Changing the Password .....	22
2.4 Browse Video .....	23
2.4.1 Install Plugins.....	25
2.5 Setting Local Network Parameters .....	26
<b>3 Configuring Thermal</b> .....	<b>29</b>
3.1 Temperature Parameters .....	29
3.2 Ambient Temperature .....	34
3.3 Temperature Alarm.....	34
3.4 Privacy Zone Masking.....	40
3.5 Schedule Linkage .....	41
3.6 Thermal Mapping .....	49
3.7 Defect Pixel Correction .....	51
3.8 LED Control Param.....	53
<b>4 Visible Channel Image Settings</b> .....	<b>55</b>
4.1 Accessing Image Settings .....	55
4.2 Mode .....	56

4.3 Image.....	56
4.4 Scene .....	58
4.5 Exposure.....	58
4.6 WB .....	60
4.7 DayNight.....	61
4.8 Noise Reduction .....	62
4.9 Enhance Image .....	63
<b>5 Thermal Channel Image Settings .....</b>	<b>65</b>
5.1 Accessing Image Settings.....	65
5.2 Mode .....	66
5.3 Image.....	67
5.4 Scene .....	68
5.5 Set Pseudocolor .....	68
5.6 FFC Control .....	70
5.7 Noise Reduction.....	72
<b>6 Intelligent Analysis .....</b>	<b>73</b>
6.1 Intrusion .....	73
6.2 Single Line Crossing .....	77
6.3 Double Line Crossing.....	80
6.4 Enter Area / Leave Area .....	82
<b>7 Advanced Intelligent Analysis.....</b>	<b>85</b>
7.1 Smoker Detection.....	85
7.2 Smoke and Flame Detection.....	88
7.3 Fire Spot Detection.....	90
<b>8 AI Multi-object.....</b>	<b>94</b>
<b>9 Alarm Setting.....</b>	<b>96</b>
9.1 Alarm Output.....	96
9.2 Disk Alarm .....	97
9.3 Network Alarm.....	97
9.4 I/O Alarm Linkage .....	98
9.5 Motion Alarm .....	98
9.6 Audio Abnormal Detection.....	99
<b>10 Other Web Configurations.....</b>	<b>101</b>
10.1 Device Information .....	101
10.2 Stream .....	101
10.2.1 Base Stream.....	101

10.2.2 ROI.....	102
10.2.3 Snapshot.....	103
10.3 Device .....	104
10.4 Privacy Masking.....	105
10.5 Network Service.....	105
10.5.1 QOS .....	105
10.6 Privacy Manager .....	106
10.7 Protocol .....	107
10.8 Device Log.....	108
10.9 Maintenance .....	108
10.10 Local Config.....	109
<b>A Troubleshooting.....</b>	<b>110</b>

# 1 Product Overview

---

## 1.1 About Product

- The Bi-spectrum network camera is integrated with the thermal imaging and temperature measuring, visible fusion, core image intelligent analysis, etc.
- Unique double registration mechanism, visible light and thermal imaging is reflecting the same scene.
- The Bi-spectrum network camera is high precision, built-in automatic temperature correction, completely eliminate the temperature drift, it can work stable and reliable for long time.
- Intelligent temperature and visible light image channel display details information to easily monitor and discriminate.
- Smart over temperature alarm and location, sound and light alarm, track rapidly when temperature was abnormal.


It can be widely used in important fields such as airports, stations, urban roads, traffic surveys, corporate security, warehouse monitoring, and residential security.

## 1.2 Dimension







### 1.2.1 Without Conduit Box




Dimensions (unit: mm)

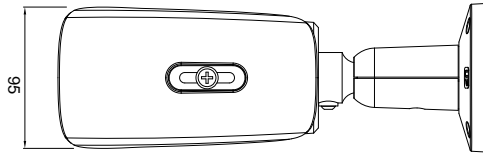

273~303 Adjustable

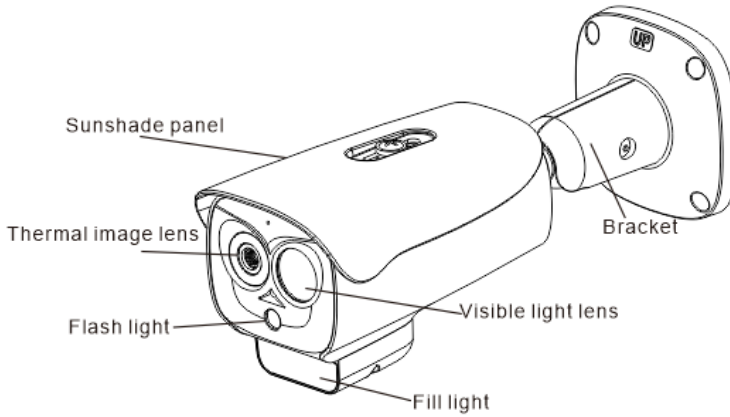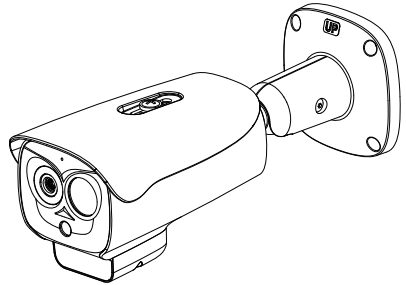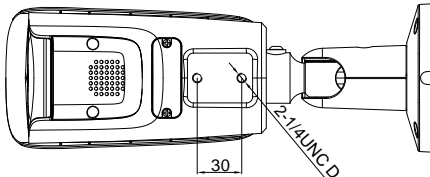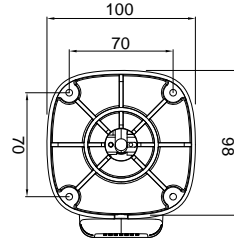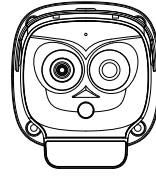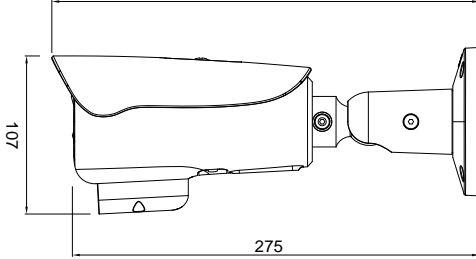

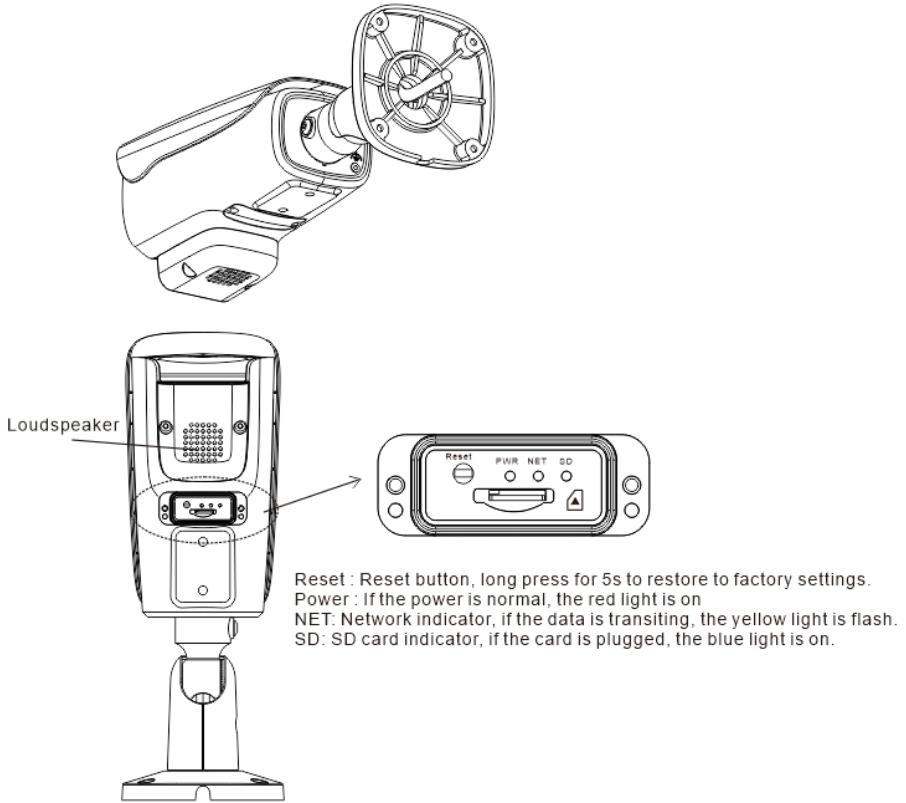

Reset : Reset button, long press for 5s to restore to factory settings.


Power : If the power is normal, the red light is on.


NET: Network indicator, if the data is transiting, the green light is flash.


SD: SD card indicator, if the card is plugged, the blue light is on.

### 1.2.2 With Conduit Box

Dimensions (unit: mm)

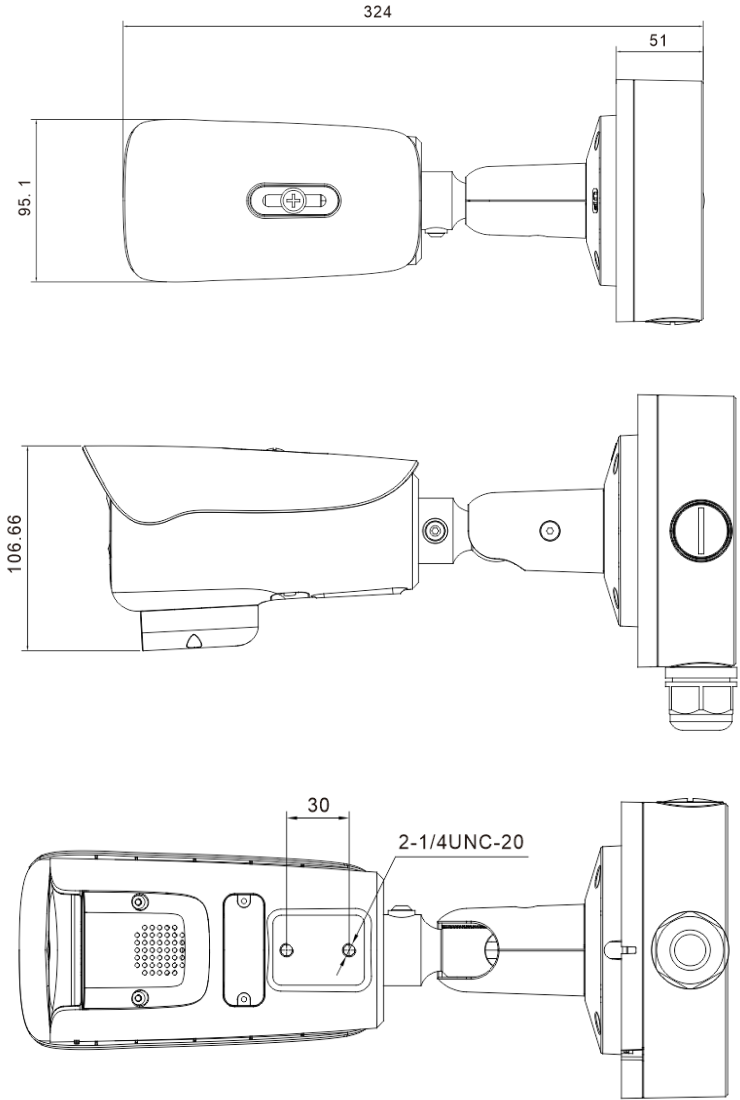

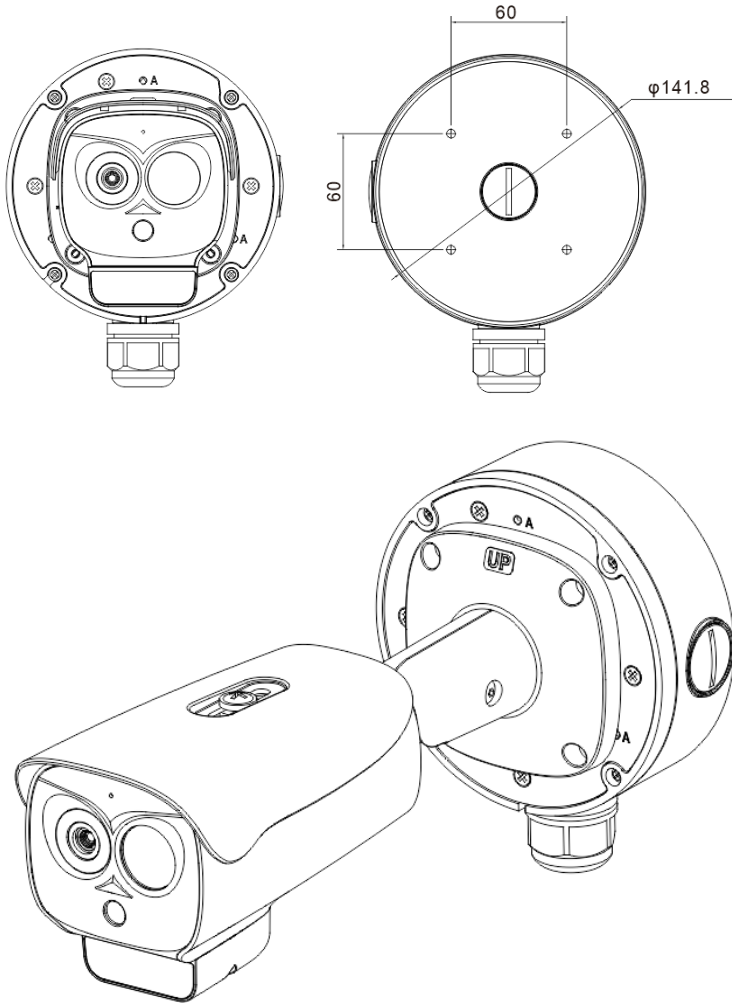

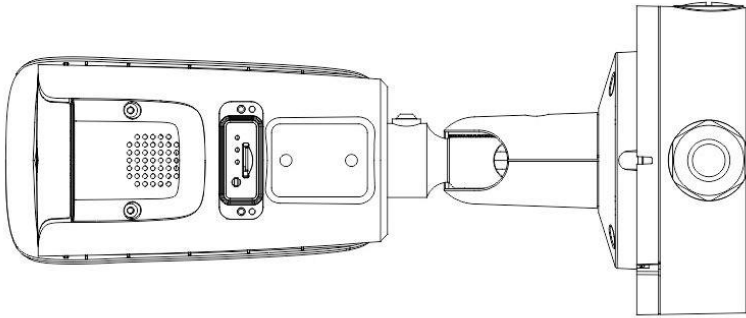


## 1.3 Installation

### 1.3.1 Without Conduit Box


Step 1 Stick the installation location sticker on ceiling or wall, drill four holes based on the marks on the sticker. Drive the swell plastic buttons into holes.

Step 2 Loosen screw 1 to free the body to easy to install the fixed screws of camera. This step before mount is highly suggested to make it convenient to use electric screwdriver.

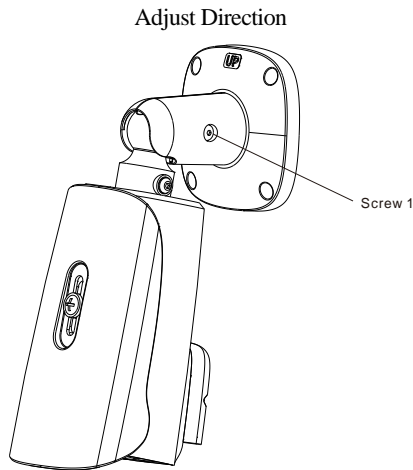


Step 3 Install the camera on the ceiling or wall and fixe the screws.

### Fix Camera

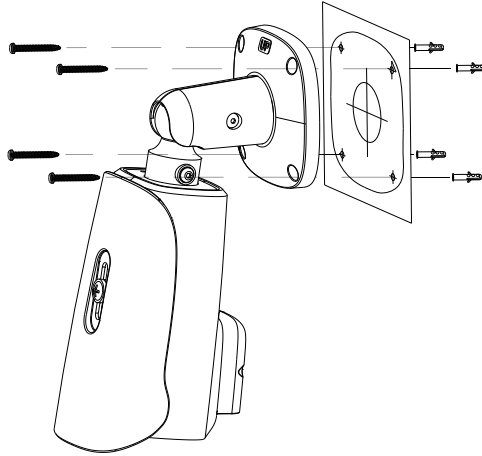


Step 4 Connect the multi-connector cable and monitor, loosen the screw 2 to adjust the position so that the camera face the monitored area. Tighten the screw 1 and screw 2.

### Adjust Image

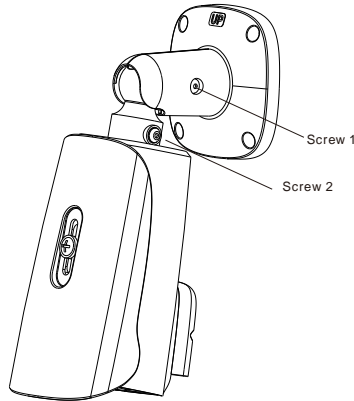


## 1.3.2 With Conduit Box


Step 1 Stick the installation location sticker on ceiling or wall, drill four holes based on the marks on the sticker. Drive the swell plastic buttons into holes.

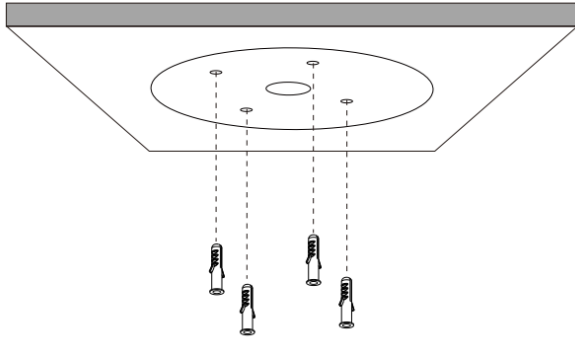


Step 2 Install the conduit box on the ceiling or wall and then fix the screws.

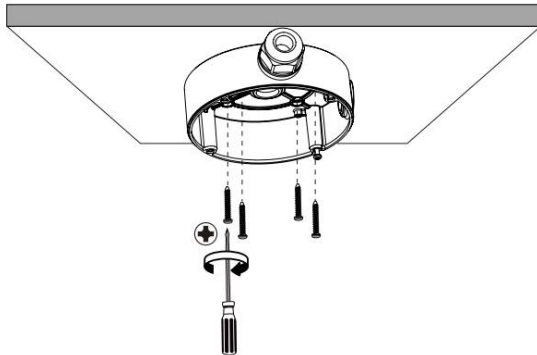


Step 3 Take out the camera and use the screws provided in the conduit box to fix the camera on the mounting plate of junction box.

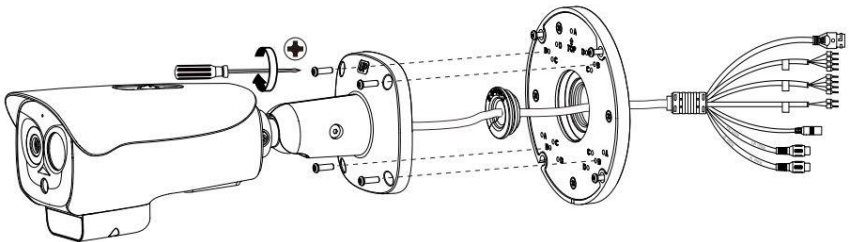

Step 4 Connect camera cables and then place them inside the conduit box. Fix the mounting plate and the conduit box by the screws in the conduit box.

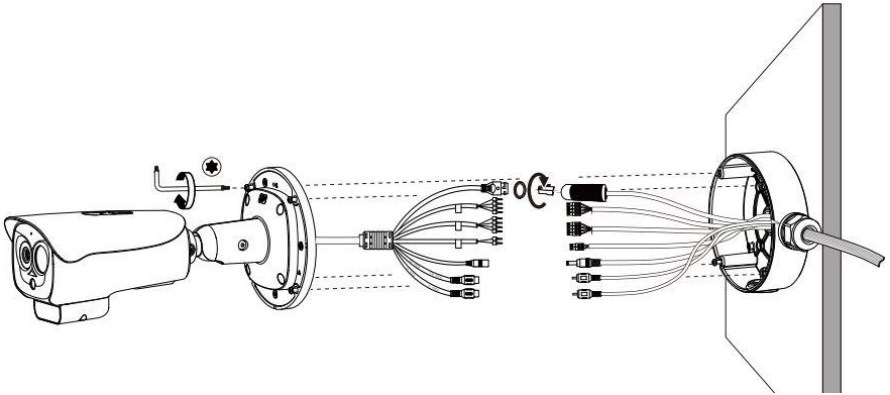

Step 5 Adjust the direction of the camera as shown in the pictures in step 4 and tighten screw 2.  
If the camera image needs to be adjusted, loosen screw 2, align the image to the position to be detected, and tighten screw 2 to complete the camera installation.

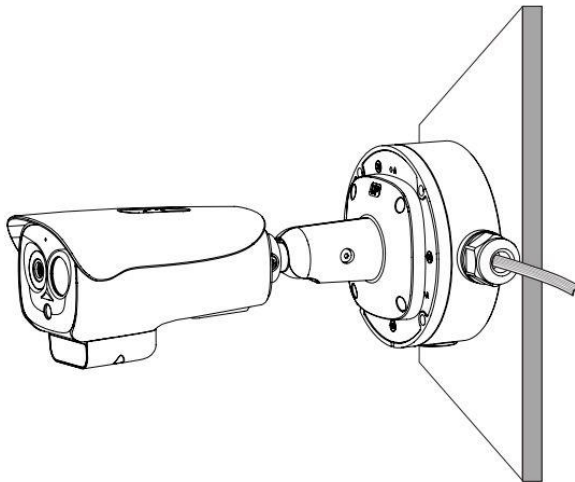


## 1.4 Cable Connection

 **NOTE**

The different models may have different cables, please refer to actual product.



Multi-connector Combination Cables

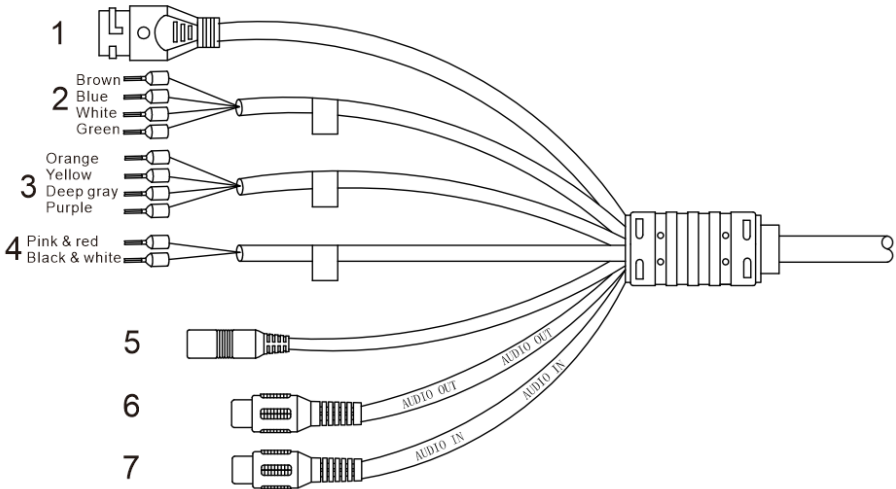

ID	Core of Cable	Functions
1	Network interface	Connect to the standard Ethernet cable. Support PoE power supply.
2	ALARM1	Alarm in/ alarm out 1 Brown: alarm OUT COM 1 Blue: alarm OUT 1 White: alarm IN COM 1 Green: alarm IN 1
3	ALARM 2	Alarm in/ alarm out 2 Orange: alarm OUT COM 2 Yellow: alarm OUT 2 Grey: alarm IN COM 2 Purple: alarm IN 2
4	RS485	RS485 interface connects to the external pan & tilt. Pink & red is RS485+ Black & white is RS485-
5	DC12V (2A)	Power interface, connects to the 12 V DC power

		supply.
6	Audio Output	Connect to the external audio device such as the voice box.
7	Audio Input	Input the audio signal and receives the analog audio signals from the sound pick-up device. RCA connector is supported.

# 2 Quick Configuration

---

## 2.1 Login and Logout

---



### CAUTION

To access the web interface through Edge browser (IE Mode); Otherwise, some functions may be unavailable.

---

#### Login system

Step 1 Run VIVOTEK Shepherd or ONVIF Search Tool to find the IP address of your thermal camera.

Step 2 Open the Microsoft Edge, enter the IP address of IP camera in the address box, and press Enter.

The login page is displayed, as shown in the following picture.

VIVOTEK

English ▾

User Name


Password

Step 3 Input the User Name and Password.

 **NOTE**

- Access the web at Edge browser which the mode should switch to **Reload in Internet Explorer mode**. At browser “Setting > Default browser” page, **Let Internet Explorer open sites in Microsoft Edge** choose “Always (Recommended)”; **Allow sites to be reloaded in Internet Explorer mode (IE mode)** choose “Allow”.


Figure 2-1 Internet Explorer Compatibility

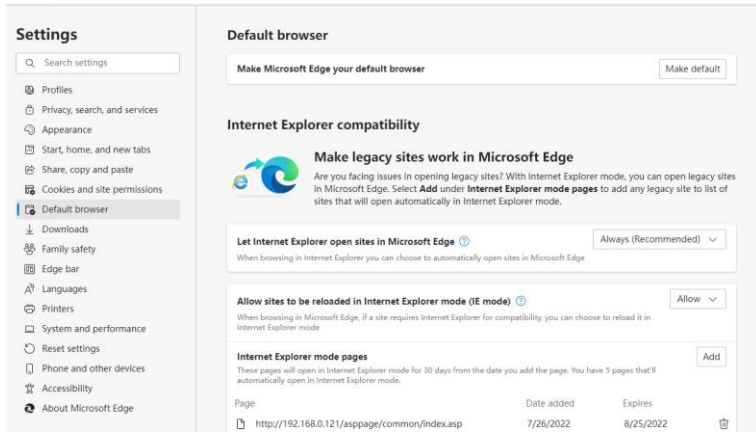

- The default name and password are both admin. Modify the password when you login the system for first time to ensure system security.
- After modifying password, you need to wait at least three minutes then power off to make sure modifying successfully . Or login the Web again to test the new password.
- You can change the system display language on the login page.

Step 4 Click Login arrow to enter main interface.


**Logout**

Click  in the top right to back to Web Login.






## 2.2 Homepage Layout

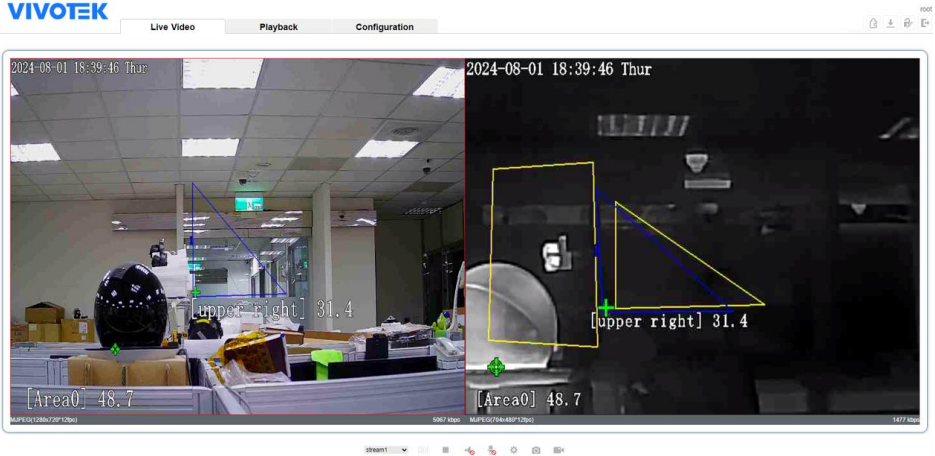



On the homepage, user can view real-time video, playback and configuration. User can set Sensor parameters, Video parameter, Video control, and logout of the system.



### Homepage Layout



### Elements on the Homepage

NO.	Element	Description
1	Real-time video area	Real-time videos are played in this area. You can also set sensor parameters. The two channels are displaying at the same time.
2	Playback	You can query the playback videos in this area.
3	Configuration	You can choose a menu to set device parameters, including the device information, audio and video streams, alarm setting, and privacy mask function.
4		Download the latest plugin IPC Local Server, you can choose the plugin to play H.265 video smoothly.
5	Change password	You can click  to change the password.
6	Sign Out	You can click  to return to the login page.
7	Stream	The visible light channel has two streams. You can set details at configuration base stream interface. The thermal image channel has two streams.
8	-	 : Play / pause.  : Audio.

NO.	Element	Description
		 : Interphone.  : Sensor, or click right mouse button, more details please refer to chapter 4 and 5  : Snapshot.  : Record video to local storage.


When the device generates an alarm, the alarm icon  is displayed. You can click  to view the alarm information.

 **NOTE**


When the device accepts an alarm signal, the alarm icon will display within 10s in the web management system.

## 2.3 Changing the Password

### Description

User can click  to change the password for logging into the system.

### Procedure

Step 1 Click  in the upper right corner of the main page.

Change Password Dialog Box

Change Password
×

Old Password	<input type="password"/>
New Password	<input type="password"/>
Confirm	<input type="password"/>

Password Advice:

1. Recommended password length is 8 characters
2. Recommended passwords contain numbers, lowercase characters, uppercase characters and special characters
3. Password and username are recommended to be different

OK
Cancel



**NOTE**

- The change password page will be displayed if you don't change the default password when you login the system for the first time.

Step 2 Input the old password, new password, and confirm password.

Step 3 Click **OK**.

If the message "**Change password success**" is displayed, the password is successfully changed. If the password fails to be changed, the cause is displayed. (For example, the new password length couldn't be less than eight.)

## 2.4 Browse Video

User can browse the real-time video in the web management system.


### Preparation

To ensure the real-time video can be played properly, you must perform the following operations when you log in to the web for the first time:

Step 1 Open Microsoft Edge. Choose Control Panel > Internet options > Security > Trusted sites > Sites.

In the display dialog box, click **Add**, as shown in the picture below.


## Adding a Trusted Site

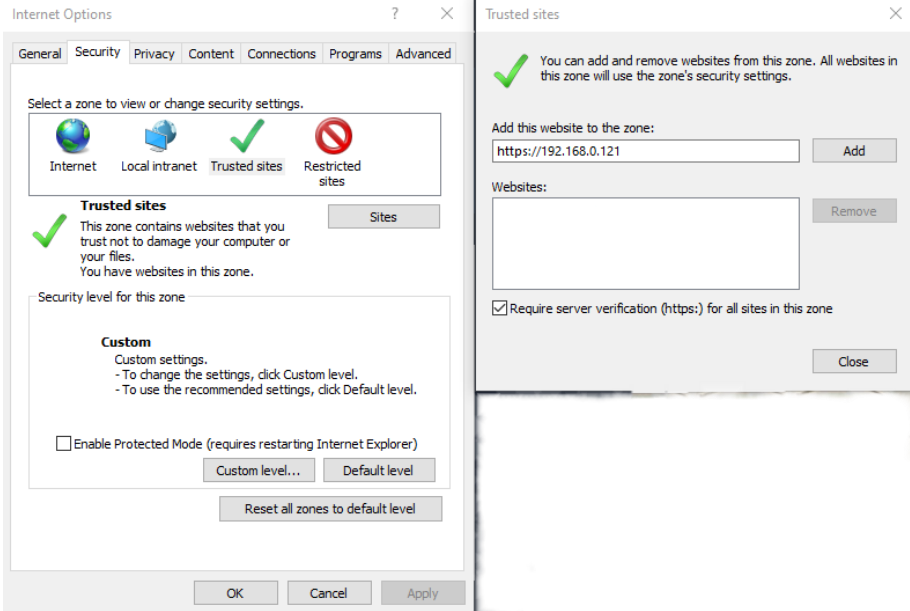

Step 2 In Microsoft Edge, choose **Control Panel > Internet Options > Security > Customer level**, and set Download unsigned ActiveX control and initialize and script ActiveX controls not marked as safe for scripting under ActiveX controls and plug-ins to Enable.



### Configuring ActiveX Control and Plug-ins

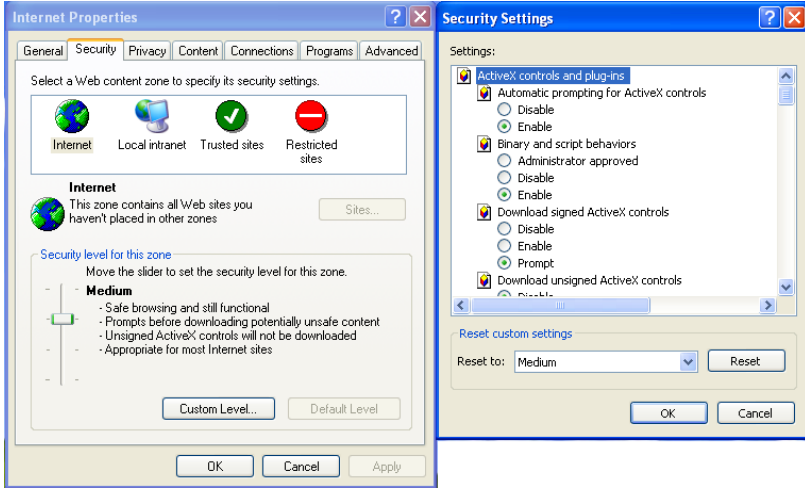

Step 3 Download and install the player control as prompted.

#### NOTE

- The login page is displayed when the control is loaded.
- If you can view the live video immediately, you can ignore the steps of adding trust site.

## 2.4.1 Install Plugins

A message “Download and install the new plugin” will be popped up when you log in to the web management system for the first time.

Download the Plugin Page

 **Selecting a play mode, please**

---

- [Use the VLC to play](#)
- [Download and install the new plugin](#) (Please reopen the browser after installing)

#### Procedure

Step 1 Click the message, download and install the plugin follow the prompts.

Step 2 Reopen the browser after installation.

Step 3 On live video page, you can operate these buttons as shown in live video.

#### NOTE

- Channel switch, click the live video, the red frame means the chosen channel.
- During installing plugins, you need to close the browser, finish the installation, login the device again.

## 2.5 Setting Local Network Parameters

### Description


Local network parameters include:

- IP protocol
- IP address
- Subnet mask
- Default gateway
- Dynamic Host Configuration Protocol (DHCP)
- Preferred Domain Name System (DNS) server
- Alternate DNS server
- MTU

### Procedure

Step 1 Choose Configuration > Device > Local Network.

**Local Network**

 Local Network

---

Network Card ID	1
IP Protocol	IPv4
DHCP	<input checked="" type="checkbox"/>
DHCP IP	10.66.4.109
Preferred DNS Server	10.135.1.51
Alternate DNS Server	10.135.101.51
MTU(1280-1500)	1500

Step 2 Set the parameters.

Local Network Parameters

Parameter	Description	Setting
IP Protocol	IPv4 is the IP protocol that uses an address length of 32 bits.	[Setting method] Select a value from the drop-down list box. [Default value] <b>IPv4</b>
DHCP	The device automatically obtains the IP address from the DHCP server.	[Setting method] Click the option button. NOTE To query the current IP address of the device, you must query it on the platform based on the device name.
DHCP IP	IP address that the DHCP server assigned to the device.	[Default value] DHCP is ON.
IP Address	Device IP address that can be set as required.	[Setting method] Enter a value manually.
Subnet Mask	Subnet mask of the network adapter.	[Setting method] Enter a value manually.
Default Gateway	This parameter must be set if the client accesses the device through a gateway.	[Setting method] Enter a value manually.
Preferred DNS Server	IP address of a DNS server.	[Setting method] Enter a value manually.

Parameter	Description	Setting
Alternate DNS Server	IP address of a domain server. If the preferred DNS server is faulty, the device uses the alternate DNS server to resolve domain names.	[Setting method] Enter a value manually.
MTU	Set the maximum value of network transmission data packets.	[Setting method] Enter a value manually.  NOTE The MTU value is range from 1280 to 1500, the default value is 1500, Please do not change it arbitrarily.

Step 3 Click **OK**.

- If the message "**Apply success**" is displayed, click OK. The system saves the settings. The message "**Set network pram's success**, Please login system again" is displayed. Use the new IP address to log in to the web management system.
- If the message "Invalid IP Address", "**Invalid Subnet Mask**", "**Invalid default gateway**", "**Invalid primary DNS**", or "**Invalid space DNS**" is displayed, set the parameters correctly.



**NOTE**

- If you set only the Subnet Mask, Default Gateway, Preferred DNS Server, and Alternate DNS Server parameters, you do not need to login to the system again.
- You can click Reset to restore the previous parameters if required.

# 3 Configuring Thermal

## 3.1 Temperature Parameters

Temperature parameters include temperature unit, ambient type, ambient temperature, cavity temperature, correctional coefficient, area temperature display mode, area temperature type, measure mode, area alarm interval and so on.

### Operation Procedure

Step 1 Choose **Configuration > Thermal > Temperature Parameters**.

The **Temperature Parameters** page is displayed, as shown in the following picture.

Temperature Parameters

Temperature Parameters	
Temperature Measurements	<input type="checkbox"/> ON
Temperature Units	Celsius
Length Units	Meters
Cavity Temperature	34.49
Correction Coefficient	0.00
Area ID Display Mode	Area Name
Area Temperature Display Mode	Low Left
Font Border	<input type="checkbox"/> ON
Font Size	Mid
Area Temperature Type	Highest Temperature
Measure Mode	General
Display Alarm Area	<input type="checkbox"/> OFF
Area Alarm Interval (1-1800s)	10
Area Alarm Delay (0-10s)	0
Temperature Range	-20.0 - 150.0
Prevent Overheating	Auto
Duration (5-60s)	60

Advanced

Refresh Apply

Step 2 Set the parameters according to the following table.

Table 3-1 Temperature Parameters

Parameter	Description	Setting
Temperature Unit	Celsius and Fahrenheit temperature units are available.	[Setting method] Select a value from the drop-down list box. [Default value] <b>Celsius</b>
Length units	Meters and feet length units are available.	[Setting method] Select a value from the drop-down list box. [Default value] Meters
Cavity Temperature	The cavity temperature of camera.	N/A
Correction Coefficient	Correction coefficient is refer to the deviation of measured object temperature and actual temperature, is offset value. For example: 1. The measured object temperature is 20, and actual temperature is 20.5, so the correction coefficient should be <b>0.5</b> . 2. The measured object temperature is 20, and actual temperature is 19.5, so the correction coefficient should be -0.5. NOTE User should contact the technical support staff of our company at this condition to make sure to apply	[Setting method] Enter a value manually. [Default value] <b>0.00</b>
Area ID display mode	There two mode to display, area ID and area name	[Setting method] Select a value from the drop-down list box. [Default value] <b>Area ID</b>

Parameter	Description	Setting
Area Temperature Display Mode	The display position of temperature information on the live-video image.	[Setting method] Select a value from the drop-down list box. [Default value] <b>Low left</b>
Font Border	Enable to bold the font	[Setting method] Enable or disable [Default value] <b>Disable</b>
Font size	There are three font size can be chosen, small/mid/big	[Setting method] Enable or disable [Default value] <b>Mid</b>
Area Temperature Type	There are three types of area temperature.	[Setting method] Select a value from the drop-down list box. [Default value] <b>Highest Temperature</b>
Measure Mode	There are two types of measure modes.	[Setting method] Select a value from the drop-down list box. [Default value] <b>General</b>
Display Alarm Area	N/A	[Setting method] Enable or disable [Default value] <b>Disable</b>
Area Alarm Interval (1-1800s)	N/A	[Setting method] Enter a value manually ranges from 1 to 1800. [Default value] <b>10</b>
Area Alarm delay (0-10S)	N/A	[Setting method] Enter a value manually ranges from 1 to 10. [Default value] <b>10</b>

Parameter	Description	Setting
Temperature range	It depends on the device. Different devices have different modes, there are two ranges, such as -20 °C -150°C, -40 °C-150°C. The thermal imaging box network camera is -40 °C-150°C.	[Setting method] Select a value from the drop-down list box.
Prevent Overheating	Open, if temperature of the testing area is too high, you can enable it to prevent over heat function. The control cover will be lay down to keep the detector safe. There are two types, manual and auto.	[Setting method] Select a value from the drop-down list box.
Duration(5-60 S)	Prevent over heat' mode is auto, the control cover will block for duration time automatically if over heat.	[Setting method] Enter a value manually ranges from 5 to 60.

#### Advanced Interface

Dimming Mode Auto ▼

Greater Prominent  OFF

Section Prominent  OFF

Less Prominent  OFF

Raw Data Upload Interval(F/S) 1 ▼

Mix Stream Mode Close ▼

#### Advance Parameters

Parameter	Description	Setting
Dimming Mode	There are auto and manual modes. Auto: It will show on temperature item depending on the full screen temperature.  Manual: it will show on the manual value.	[Setting method] Select a value from the drop-down list box. [Default value] <b>Auto</b>



Parameter	Description	Setting
Greater Prominent	Enable that, the image will show the setting color if the temperature is higher than set value.	[Setting method] Enter a value manually. Choose one color to show.
Section Prominent	Enable that, the image will show the setting color if the temperature is between minimum and maximum temperature.	[Setting method] Enter a value manually. Choose one color to show.
Less Prominent	Enable that, the image will show the setting color if the temperature is lower than set value.	[Setting method] Enter a value manually. Choose one color to show.
Raw Data Upload Interval(F/S)	Interval of uploading the raw data.	[Setting method] Select a value from the drop-down list box. [Default value] <b>1</b>
Mix Stream Mode	This function is used for mixing thermal and visible imaging, if you want to adjust the location, please set at thermal channel “ Configuration > Image Settings > Set Pseudocolor” tab interface. There are close, mode 1 mode 2, and mode 3. The different models maybe have different displays; Please refer to the actual product.	[Default value] <b>Close</b>

## 3.2 Ambient Temperature

### Ambient Temperature

#### Ambient Temperature

Ambient Temperature	<input type="text" value="25.00"/>	°C
Cavity Temperature	<input type="text" value="25.55"/>	°C

Refresh

Apply

#### Parameter of Ambient Temperature

Parameter	Description	Setting
Ambient Temperature	Environment temperature of camera.	[Setting method] Enter the temperature of ambient environment. [Default value] <b>25</b>
Cavity Temperature	Set the ambient temperature, click “Apply”, click “Refresh”, the camera will get the value automatically.	---

## 3.3 Temperature Alarm

### Operation Procedure

Step 1 Choose **Thermal >Temperature Alarm**.

## Alarm Configuration

### Alarm Configuration

Channel 2
General

Measure Mode
General

-

+
4
+

[PTZ]
[+]
[+]
[+]
[+]

Clear


Enable	ID	Name	Type	Alarm Type	Warning Value	Alarm Value	Maximum Alarm Va	Duration(1-1
<input checked="" type="checkbox"/>	0	Area0	Rectangle	Threshold Alarm	30.00	40.00	60.00	1.00
<input checked="" type="checkbox"/>	1	upper right	Polygon	Threshold Alarm	35.00	40.00	60.00	1.00
<input checked="" type="checkbox"/>	2	Area2	Polygon	Threshold Alarm	40.00	50.00	60.00	1.00
<input type="checkbox"/>	3	Area3	Point	Threshold Alarm	48.00	50.00	60.00	1.00
<input type="checkbox"/>	4	Area4	Point	Threshold Alarm	48.00	50.00	60.00	1.00
<input type="checkbox"/>	5	Area5	Point	Threshold Alarm	48.00	50.00	60.00	1.00
<input type="checkbox"/>	6	Area6	Point	Threshold Alarm	48.00	50.00	60.00	1.00
<input type="checkbox"/>	7	Area7	Point	Threshold Alarm	48.00	50.00	60.00	1.00

Step 2 Set thermal alarm configuration and temperature measurement parameters according to the following table **Error! Reference source not found.** Checking “Alarm” option in this alarm configuration to take effect.

### Alarm Configuration

Parameter	Description	Setting
Channel	Channel 1 is visible channel. Channel 2 is thermal channel.	[Setting method] Select a value from the drop-down list box. [Default value] 2

Parameter	Description	Setting
Measure Mode	Set at temperature parameter interface.	N/A
Enable	Tick the ID to enable the area measuring.	[Setting method] Tick
Name	Area name of temperature area.	[Setting method] Enter a value manually.
Type	Type of temperature area. ID 0 is default rectangle area, which is full screen.	[Setting method] Select a value from the drop-down list box. [Default value] <b>Rectangle/Point</b>
Alarm Type	<p>1) Threshold alarm, 2) Temperature difference alarm, 3) Section alarm, 4) Temperature rise alarm are available for the alarm types.</p> <p>Section Alarm: if the temperature value is among the set temperature range, it will generate the alarm.</p> <p>Temperature rise alarm means if the rising temperature value is more than the set value, it will generate the alarm.</p>	<p>[Setting method] Select a value from the drop-down list box. [Default value] <b>Threshold alarm</b></p>
Warning Value	Camera will trigger warning alarm when the object temperature reaches the warning value.	<p>[Setting method] Enter a value manually. [Default value] <b>48</b></p>
Alarm Value	Camera will alarm when the object temperature reaches the alarm value.	<p>[Setting method] Enter a value manually. [Default value] <b>50</b></p>
Maximum Alarm Value	At section alarm type, the device would not alarm when the temperature is higher than maximum alarm value.	<p>[Setting method] Enter a value manually. [Default value] <b>60.00</b></p>


Parameter	Description	Setting
Duration (1-10S)	Choose temperature rise alarm, set the duration. the temperature value rises within duration setting, the alarm is triggered successfully.	[Setting method] Enter a value manually. [Default value] <b>1.00</b>
Emission Rate	The emission rate is the capability of an object to emit or absorb energy. The emission rate should be set only when the target is special material.	[Setting method] Enter a value manually. [Default value] <b>0.95</b>
Distance(M)	The distance between camera and target.	[Setting method] Enter a value manually. [Default value] <b>15</b>  <b>NOTE</b> Enter actual distance when the distance between camera and target is less than 15m. Enter 15 when the distance between camera and target is great than or equal to 15m.
Reflect	When there are some high temperature objects on scene, and the temperature reflect to the other object, you can enable this function to calibrate the temperature.	[Setting method] Tick to enable
Reflect Temperature	The temperature of high temperature object.	[Setting method] Enter a value manually. [Default value] <b>50.00</b>
Ignore Object	Enable to bypass the temperature of area capturing AI object.	[Setting method] Select a value from the drop-down list box.
<b>Alarm</b>	<b>Enable or disable the alarm output and linkage of area.</b>	[Setting method] Tick to enable alarm.
Masking	Enable to bypass the temperature of this area.	[Setting method] Tick to bypass.

Parameter	Description	Setting
Group ID	<p>The ID can be chosen into one of six groups, or no group. The group will be alarm following as the next rules:</p> <p>A=The highest temperature of groups (the highest temperature of N regions is the largest)</p> <p>B=Average temperature of groups (average temperature of N regions)</p> <p>WA=Warning value</p> <p>AA=Alarm value</p> <p>a. If <math>A-B \geq WA</math>, a temperature difference warning signal is generated ---&gt; (the one with the largest difference between the N areas and the average temperature is the alarm area flashing)</p> <p>b. If <math>A-B \geq AA</math>, a temperature difference alarm signal is generated ---&gt; (the one with the largest difference between the N areas and the average temperature is the alarm area flashing)</p> <p>c. If the warning and alarm conditions are met at the same time, the alarm signal will be generated first.</p>	<p>[Setting method]</p> <p>Select a value from the drop-down list box.</p>

### Step 3 Set temperature area.

1. Tick an area ID.
2. Press and hold the left button of mouse and drag in the video area to draw a temperature area. Right-click to finish the area selected.

## Temperature Area Setting Interface

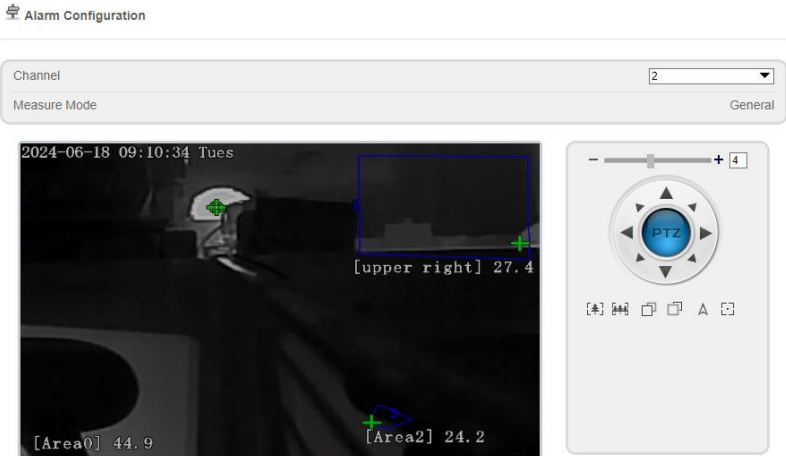

3. Click **Apply**, the message “Apply success” is displayed, and the temperature area is set successfully.

### **NOTE**

ID 0 is the full screen; The area cannot be changed.



: the lowest temperature of the full screen.



:the highest temperature of the full screen.



: the lowest temperature of the area.



: the highest temperature of the area.

### **Delete a temperature area:**

1. Select an area ID.
2. Click **Clear**.
3. Remove the tick of area ID.
4. Click **Apply**, the message “Apply success” is displayed, the temperature area is deleted successfully.

Step 4 Click **Apply**.

The message "Apply success" is displayed, and the system saves the settings.

## 3.4 Privacy Zone Masking

Privacy zone masking means that the camera will do not detect the temperature of that area. Up to 8 areas can be configured.

### Operation Procedure

Step 1 Choose **Configuration > Thermal > Privacy Zone Masking**.


Privacy Zone Masking

 Privacy Zone Masking

---

Enable  ON

Privacy Zone Masking Display  ON



Step 2 Enable the shield area.

Step 3 Enable Show Privacy Zone Masking, then the setting shield will show on live video.

Step 4 Click-left mouse button to set area; Click-right mouse button to end the setting.

Step 5 Click **Clear** to clear the shield area.



## 3.5 Schedule Linkage

### Operation Procedure

Step 1 Go to **Configuration > Thermal > Schedule Linkage**.

#### Schedule Linkage

Threshold Alarm    Threshold Warning    Temperature Differenc    Temperature Differenc    Temperature Section A

Temperature Rise Alar    Temperature Rise War

---

Output Channel  1  2

Alarm Record  OFF

SMTP  OFF

FTP Upload  OFF

Audible Alarm  OFF

Flashlight Alarm  OFF

---

Armed     UnArmed

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Sun																									
Mon																									
Tue																									
Wed																									
Thur																									
Fri																									
Sat																									

Step 2 Choose the output channel.


Step 3 Enable event linkage: “Alarm Record”, “SMTP”, “FTP upload”, audible alarm, flashlight alarm.

Step 4 Set schedule linkage.

Step 5 The message "Apply success" is displayed, the system saves the settings.

 **NOTE**

- **Alarm output:** Users should connect the external alarm device (such as siren) to alarm output cables. The parameter can be set by going to “ Configuration > Alarm > Alarm Output”.

 Alarm Output

Alarm Output	1
Name	<input type="text"/>
Valid Signal	Disconnect
Alarm Output Mode	Switch Mode
Follow Source	<input type="checkbox"/> OFF
Alarm Time(ms)(0:Continuous)	0

Timing Alarm Output  OFF

Manual control

Alarm Output

Parameter	Description	Setting
Alarm Output	ID of the alarm output channel. <b>NOTE</b> The number of alarm output channels depends on the device model.	[Setting method] Select a value from the drop-down list box. [Default value] 1
Name	Alarm output channel name.	[Value range] 0 to 32 bytes
Valid Signal	The options are as follows: <b>Close:</b> An alarm is generated when an external alarm signal is received. <b>Open:</b> An alarm is generated when no external alarm signal is received.	[Setting method] Select a value from the drop-down list box. [Default value] Close

Parameter	Description	Setting
Alarm Output Mode	<p>When the device receives I/O alarm signals, the device sends the alarm information to an external alarm device in the mode specified by this parameter. The options include the switch mode and pulse mode.</p> <p>NOTE</p> <ul style="list-style-type: none"> <li>• If the switch mode is used, the alarm frequency of the device must be the same as that of the external alarm device.</li> <li>• If the pulse mode is used, the alarm frequency of the external alarm device can be configured.</li> </ul>	<p>[Setting method]                      Select a value from the drop-down list box.                      [Default value]                      Switch Mode</p>
Alarm Time (ms) (0: Continuous)	<p>Alarm output duration. The value <b>0</b> indicates that the alarm remains valid.</p>	<p>[Setting method]                      Enter a value manually.                      [Default value]                      0                      [Value range]                      0 to 86400 seconds</p>
Timing Alarm Output	<p>Enable timing alarm output, set the schedule to time alarm.</p>	<p>[Setting method]                      Enable                      [Default value]                      OFF</p>
Manual Control	<p>Control the alarm output.</p>	<p>N/A</p>

- **Alarm Record:** Users insert the SD card in camera. The recording time is set at “ **Configuration > Device Record > Record Policy**” interface.
- **SMTP:** At “ **Configuration > Network > SMTP**” interface, users should set the parameters of SMTP in advance.

### SMTP



SMTP Server Address	*	<input type="text"/>
SMTP Server Port	*	<input type="text" value="25"/>
User Name	*	<input type="text"/>
Password	*	<input type="password" value="12345"/>
Send anonymously		<input type="checkbox"/>
Sender E-mail Address	*	<input type="text"/>
Recipient_E-mail_Address1	*	<input type="text"/>
Recipient_E-mail_Address2		<input type="text"/>
Recipient_E-mail_Address3		<input type="text"/>
Recipient_E-mail_Address4		<input type="text"/>
Recipient_E-mail_Address5		<input type="text"/>
Transport Mode		<input type="text" value="No Encrypt"/>
Send Interval(0-60S)		<input type="text" value="0"/>
Image Number(1-5)		<input type="text" value="1"/>
Image Interval(0.1-5S)		<input type="text" value="1.0"/>
<input type="button" value="Email Test"/>		

### SMTP Parameters

Parameter	Description	Setting
SMTP Server Address	IP address of the SMTP server.	[Setting method] Enter a value manually.
SMTP Server Port	Port number of the SMTP server.	[Setting method] Enter a value manually. [Default value] 25

Parameter	Description	Setting
User Name	User name of the mailbox for sending emails.	[Setting method] Enter a value manually.
Password	Password of the mailbox for sending emails.	[Setting method] Enter a value manually.
Sender E-mail Address	Mailbox for sending emails.	[Setting method] Enter a value manually.
Recipient_E-mail_Address 1	(Mandatory) Email address of recipient 1.	[Setting method] Enter a value manually.
Recipient_E-mail_Address 2	(Optional) Email address of recipient 2.	
Recipient_E-mail_Address 3	(Optional) Email address of recipient 3.	
Recipient_E-mail_Address 4	(Optional) Email address of recipient 4.	
Recipient_E-mail_Address 5	(Optional) Email address of recipient 5.	
Attachment Image Quality	A higher-quality image means more storage space. Set this parameter based on the site requirement.	N/A
Transport Mode	Email encryption mode. Set this parameter based on the encryption modes supported by the SMTP server.	[Setting method] Select a value from the drop-down list box. [Default value] No Encrypted

- **FTP Upload:** At “ **Configuration > Network > FTP Upload**” interface, users should set the parameters of FTP upload in advance.

### FTP Upload



FTP Upload
ON

FTP Address

FTP Port

Account

Password

FTP Path

Media Type Snapshot ▼

FTP over SSL/TLS(FTPS)

### FTP Upload Parameters










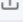






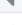

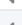









Parameter	Description	Setting
FTP Upload	Indicates whether to enable the FTP service.	[Setting method] Click the button on. [Default value] OFF
FTP Address	IP address of FTP server.	[Setting method] Enter a value annually.
FTP Port	Port of FTP server.	[Setting method] N/A [Default value] 21
Account	FTP server account.	[Setting method] Enter a value annually.
Password	FTP server Password.	[Setting method] Enter a value annually.
FTP Path	FTP Path to save the JPG image.	[Setting method] Enter a value annually.

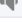Parameter	Description	Setting
Media type	The media type of sending to FTP, snapshot or video clip.	[Setting method] Select a value from the drop-down list box. [Default value] Snapshot

● **Audio Detect Alarm:** At “ **Configuration > Alarm > Audible Alarm Output**” interface, users should set the parameters of audible Alarm output in advance.


### Audible Alarm Output

#### Audible Alarm Output

ID	FileName	Cycle Number	Listen Test	Operate
0	high_temperature_alarm.wav	1		
1	normal_temperature.wav	1		
2	low_temperature_alarm.wav	1		
3	hello_welcome.wav	1		
4	verification_success.wav	1		
5	verification_failed.wav	1		
6	temperature_rise_warning.wav	1		
7	temperature_rise_alarm.wav	1		
8	temperature_range_alarm.wav	1		
9	temperature_diff_alarm.wav	1		
10	temperature_diff_warning.wav	1		
11	high_temperature_warning.wav	1		
12	fire_detected_please_process_immediately.wav	1		
13	smoking_is_prohibited_in_this_area.wav	1		


Armed  UnArmed

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Sun																									
Mon																									
Tues																									
Wed																									
Thur																									
Fri																									
Sat																									

User can set the audio file manually. Click  to upload the audio file(The type should be WAV, size must be less than 250 Kb, the bit rate should be 128 kbps.).



### Upload Audio File

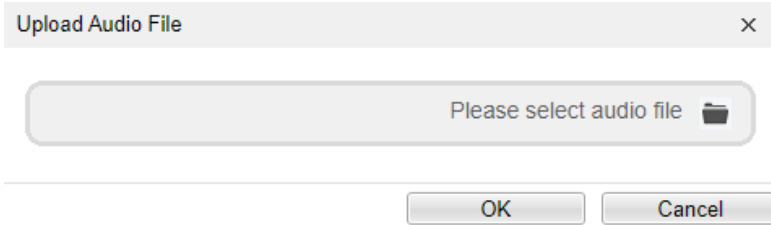

**Flashlight Alarm:** At “**Configuration > Thermal > Led Control Param**” interface, set the flashlight alarm mode. The Display Mode choose mode 5 (When alarm triggered, the Led light will keep on for 20s), the Led light will be on when the alarm is triggered. If the Led display mode is not set as Mode 5, the default status is flicker when the alarm is triggered.

### Led Control Parameter

#### Led Control Param

ID	0
Display Mode	Mode5
Brightness	<input type="range" value="40"/>

## 3.6 Thermal Mapping

Thermal mapping is used to map accurately the location of detecting area to the visual channel. The mapping has three points, user can choose the right locations to map, the three points should not be too close.


### NOTE

- The images have been calibrated before leaving the factory and can be used directly. If the highest temperature detection points are deviating on the visible light image, it needs to be re-calibrated.

## Operation Procedure

### Step 1 Choose **Configuration > Thermal > Thermal Mapping**.

#### Thermal Mapping Interface

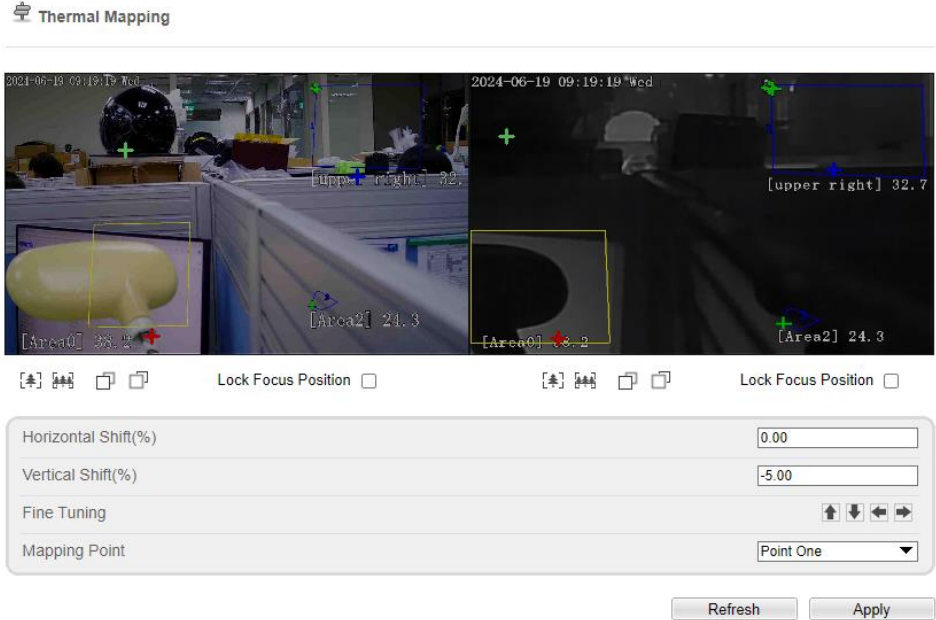

### Step 2 Settings please refer to the following table0.

Parameter of Thermal Mapping

Parameter	Description	Setting
Horizontal shift(%)	Adjust horizontal position of area which is on visual image.	[Setting method] Input value
Vertical shift(%)	Adjust vertical position of area which is on visual image.	[Setting method] Input value
Fine turning	Click the icon to adjust the position trifle.	[Setting method] Click

Parameter	Description	Setting
Mapping point	You need map three points at two channels. Points are correspond of each. The three points should cover most areas, and two points are located in the diagonal display of the picture. Point one is green cross. Point two is red cross. Point three is blue cross.	[Setting method] Select from drop list .

Step 3 Click **Apply**. The message "**Apply success**" is displayed, the system saves the settings.

## 3.7 Defect Pixel Correction

### Operation Procedure

Step 1 Choose **Configuration > Thermal > Defect Pixel Correction**.

The **Defect Pixel Correction** page is displayed.

If the image has a white dot as shown in figure, user can test the function to recover the defect pixel. Users should connect the technical support at this condition to make sure to apply.

 Defect Pixel Correction



Step 2 Click the white point at image, click **Refresh** to recover the defect pixel.


 Defect Pixel Correction



Step 3 Click **Apply**. The message "Apply success" is displayed, the system saves the settings.

### 3.8 LED Control Param

Set the display mode and brightness of LED.

 Led Control Param

ID

Display Mode

Brightness


Parameter	Description	Setting
Display Mode	There are four modes can be chosen. Open: the LED is always lighting. Close: the LED is closed. Flicker: set the flicker interval, the LED will flicker as the set. Timing: the LED will lighting at the set time.	[Setting method] Select from drop-down list.
Brightness	The LDE's brightness	[Setting method] Drag the slider. [Default value] 40

# 4 Visible Channel Image Settings

## 4.1 Accessing Image Settings

### Procedure

Step 1 Go to **Configuration > Image Settings > Channel**, and then select **Channel 1**.

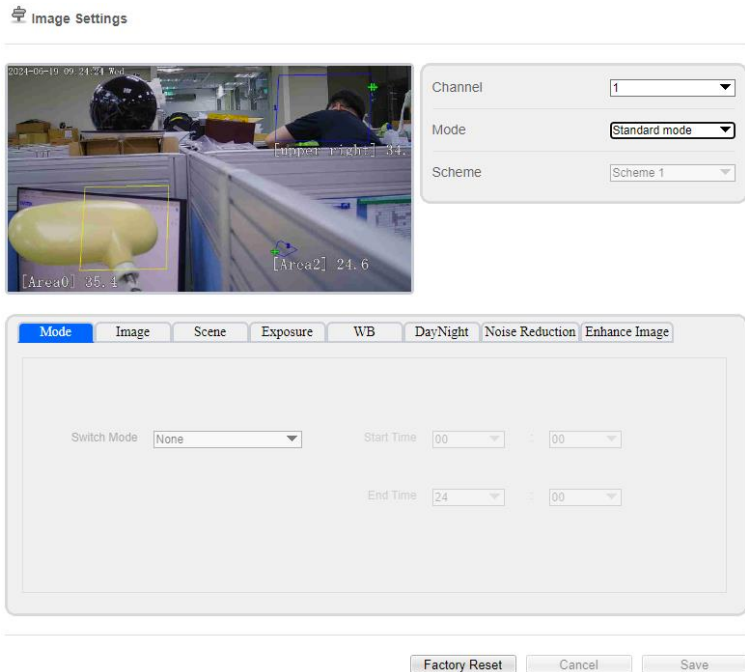


### NOTE

- All sensor configure can be modified at debug mode. Click **Standard** in the lower left corner of Sensor Setting, and choose **Debug Mode**.

## 4.2 Mode

Step 1 Click **Standard** and choose **Debug Mode**.

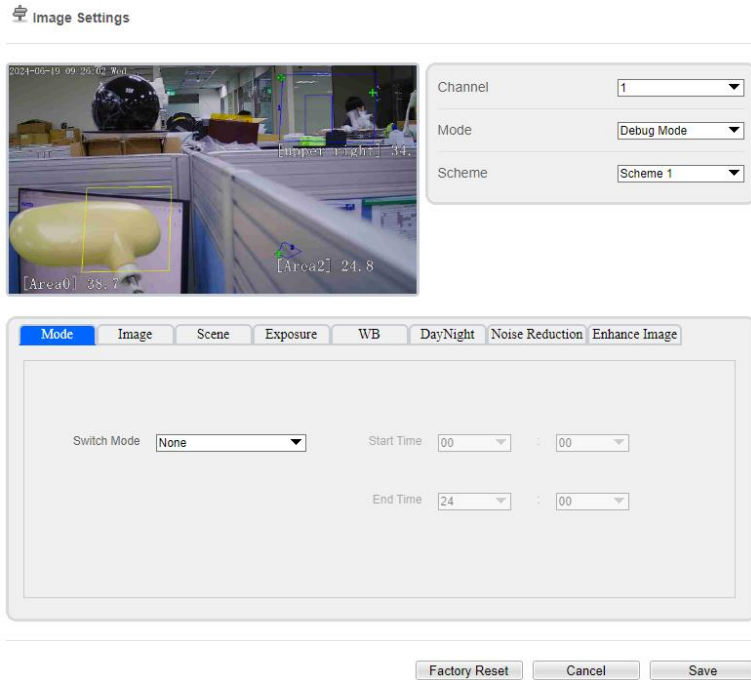


Step 2 Choose the switch mode from the drop-down list.

Step 3 Time mode: Set the Start Time, set the End Time.

Step 4 Click **Save**, the message "**Save succeed**" is displayed, the system saves the settings.


## 4.3 Image



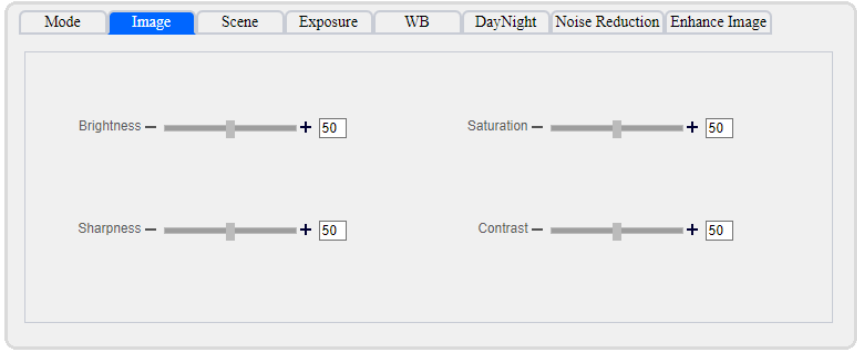


Parameter	Description	Configuration Method
Brightness	It indicates the total brightness of an image. As the value increases, the image becomes brighter.	[Setting method] Drag the slider. [Default value] 50
Sharpness	It indicates the border sharpness of an image. As the value increases, the borders become clearer, and the number of noise points increases.	[Setting method] Drag the slider. [Default value] 50
Saturation	It indicates the color saturation of an image. As the value increases, the image becomes more colorful.	[Setting method] Drag the slider. [Default value] 50
Contrast	It indicates the measurement of different brightness levels between the brightest white and darkest black in an image. The larger the difference range is, the greater the contrast; the smaller the difference range is, the smaller the contrast	[Setting method] Drag the slider. [Default value] 50

## 4.4 Scene

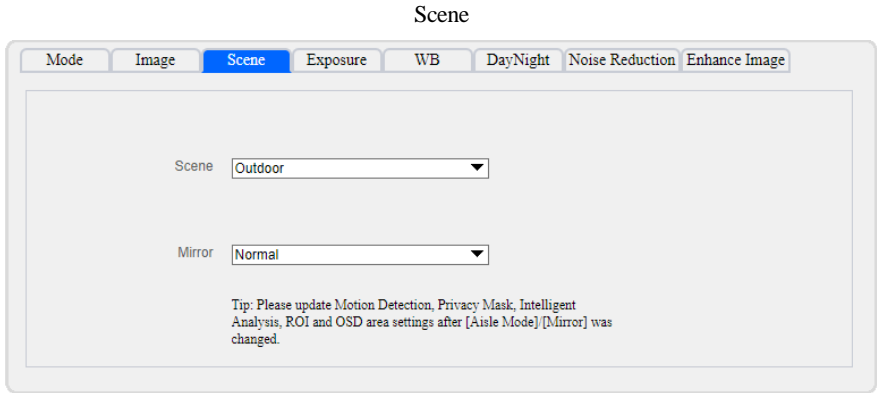


Parameter	Description	Configuration Method
Scene	Indoor or outdoor.	[Setting method] Select a value from the drop-down list. [Default value] <b>Outdoor</b>
Mirror	It is used to select the pixel location of an image. <ul style="list-style-type: none"> <li>• Normal: The image does not flip.</li> <li>• Horizontal: The image flips to the left and right.</li> <li>• Vertical: The image flips up and down.</li> <li>• Horizontal+ Vertical: The image rotates at 180 degrees.</li> </ul>	[Setting method] Select a value from the drop-down list. [Default value] <b>Normal</b>

## 4.5 Exposure

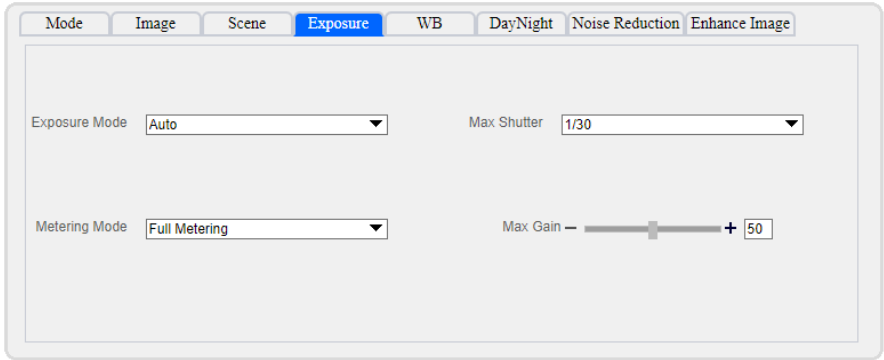


Parameter	Description	Configuration Method
Exposure Mode	<p>The exposure modes include:</p> <ul style="list-style-type: none"> <li>• Auto: The system performs auto exposure based on the monitoring environment.</li> <li>• Manual: You can set Shutter Setting to fixed values manually.</li> <li>• Shutter Priority: You can set Shutter Setting to fixed values. The shutter and gain are automatically adjusted by the system.</li> </ul>	<p>[Setting method] Select a value from the drop-down list. [Default value] <b>Auto</b></p>
Meter area	<p>Choose the area to meter, there are full metering, spot metering and partial metering.</p>	<p>[Setting method] Select a value from the drop-down list. [Default value] <b>Full metering</b></p>
Max Shutter	<p>It is valid in Iris Priority mode. You can select a maximum shutter speed. As the value increases, the image becomes brighter.</p>	<p>[Setting method] Select a value from the drop-down list. [Default value] <b>1/30</b></p>
Max gain	<p>It indicates the maximum gain. The device automatically adjusts the gain based on the external light, and the gain is less than or equal to the value of this parameter.</p>	<p>[Setting method] Drag the slider. [Default value] <b>50</b></p>

## 4.6 WB

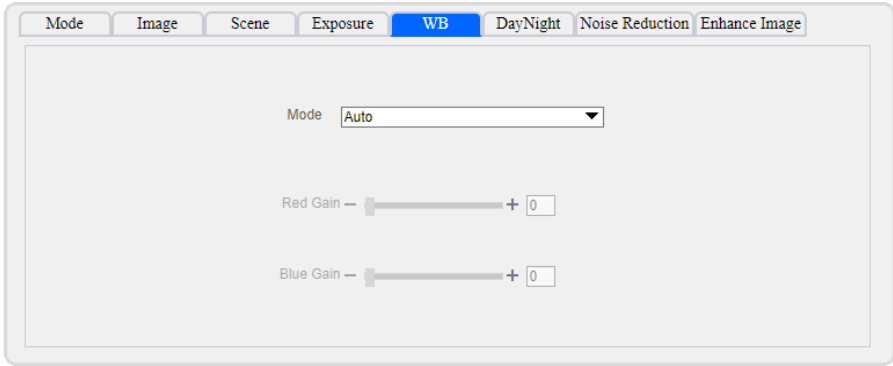

Parameter	Description	Configuration Method
Mode	<p>It is used to display the real color of a monitoring scenario when the color temperature changes.</p> <ul style="list-style-type: none"> <li>• Auto: camera adjusts automatically.</li> <li>• Tungsten: at Tungsten lamp Environment.</li> <li>• Fluorescent: fluorescent environment.</li> <li>• Daylight: at daylight environment.</li> <li>• Shadow: at low light environment.</li> <li>• Manual: adjust red and blue gain manually.</li> </ul>	<p>[Setting method] Select a value from the drop-down list. [Default value] <b>Auto</b></p>


## 4.7 DayNight

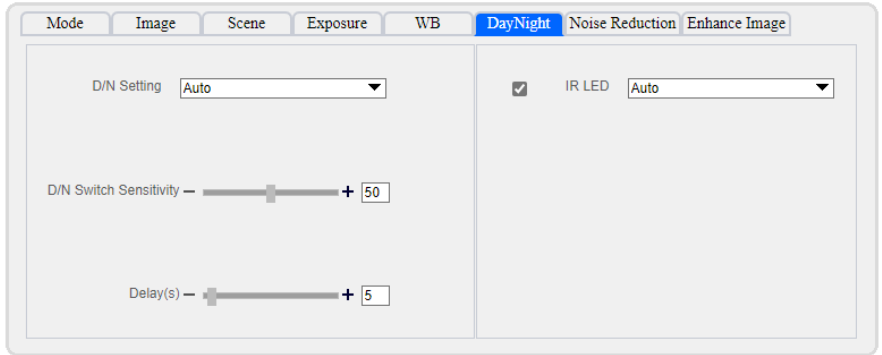

Parameter	Description	Configuration Method
<b>DayNight Mode</b>	<p>It can be set to Auto, Day Mode, Night Mode and Timing.</p> <ul style="list-style-type: none"> <li> <b>Auto mode</b>                      The image color is adjusted based on the day/night mode. In auto mode, the image switches between the colored state and the black and white state based on the brightness. In day mode, the image is colored. In night mode, the image is black and white.                 </li> <li> <b>Day mode</b>                      The image is colored, and the filter is in the day state, preventing infrared light from entering the sensor.                 </li> <li> <b>Night mode</b>                      The image is black and white, and the filter is in the night state, allowing all types of light to enter the sensor.                 </li> <li> <b>Timing</b>                      Select time from the drop-down list by the “Day To Night Time” and “Night To Day Time”.                 </li> </ul>	<p>[Setting method]                      Select a value from the drop-down list.                      [Default value]  <b>Auto</b></p>


Trans (D to N)	Day transit to night.	[Setting method] Drag the slider. [Default value] <b>50</b>
Trans (N to D)	Night transit to day.	[Setting method] Drag the slider. [Default value] <b>50</b>
Delay	N/A	[Setting method] Drag the slider. [Default value] <b>5</b>
IR LED	Tick to enable the IR LED, there are two modes can be chosen, auto and manual. At manual mode drag slider to adjust the value.	[Setting method] Select a value from the drop-down list. [Default value] <b>Auto</b>

## 4.8 Noise Reduction

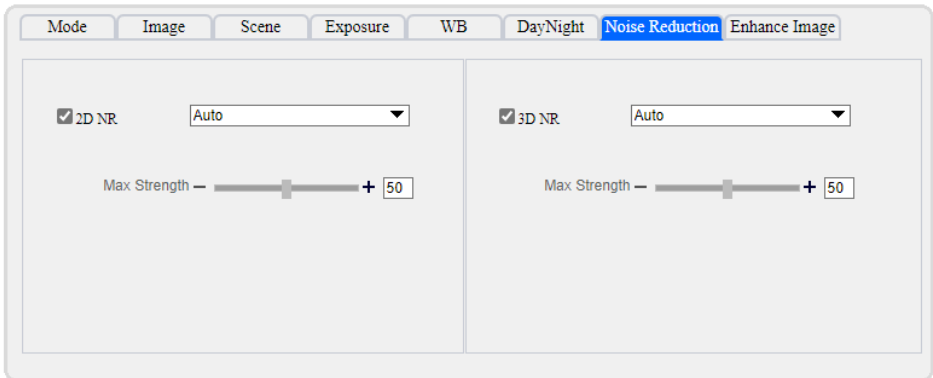

Parameter	Description	Configuration Method
2D NR	Auto /manual, default value is auto. By comparing and screening the images of the two frames before and after, the noise point position is found out and gain control is carried out on them.	[Setting method] Drag the slider strength. [Default value] <b>Auto / 50</b>
3D NR	Auto /manual, default value is auto. The 3D digital noise reduction function can reduce the noise interference of the weak signal image.	[Setting method] Drag the slider of strength. [Default value] <b>Auto / 50</b>

## 4.9 Enhance Image

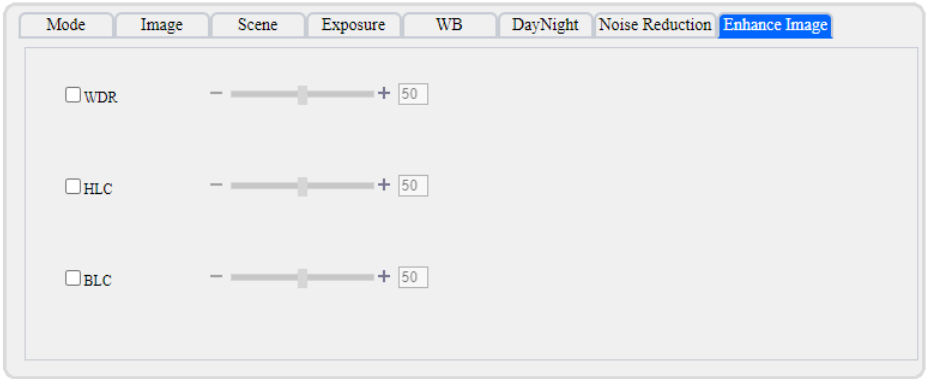

Parameter	Description	Configuration Method
WDR	It is intended to provide clear image performance in strong backlight areas such as exterior light coming through a window or glass door. High contract light conditions are no longer a problem when you need to capture detailed images.	[Setting method] Drag the slider. [Default value] <b>50</b>

---

HLC	It indicates reverse bright points in the picture to black. As an effective approach to recognize vehicle plate number at night, HLC function can detect any spotlight diffused by object-vehicle and compensate it for obtaining clearer image.	[Setting method] Drag the slider. [Default value] <b>50</b>
BLC	It indicates Back Light Compensation (BLC) automatically brings more detail to darker areas of an image when bright light shining from behind obscures it and provides perfect exposure for an object in front of very strong back light. The electronic shutter of the camera basically adjusts its exposure to try to allow for more light to be allowed in the darker areas.	[Setting method] Drag the slider. [Default value] <b>50</b>



# 5 Thermal Channel Image Settings


---

## 5.1 Accessing Image Settings

### Operation Procedure

Go to “**Configuration > Image Settings > Channel**, and then select **Channel 2**.”

 Image Settings

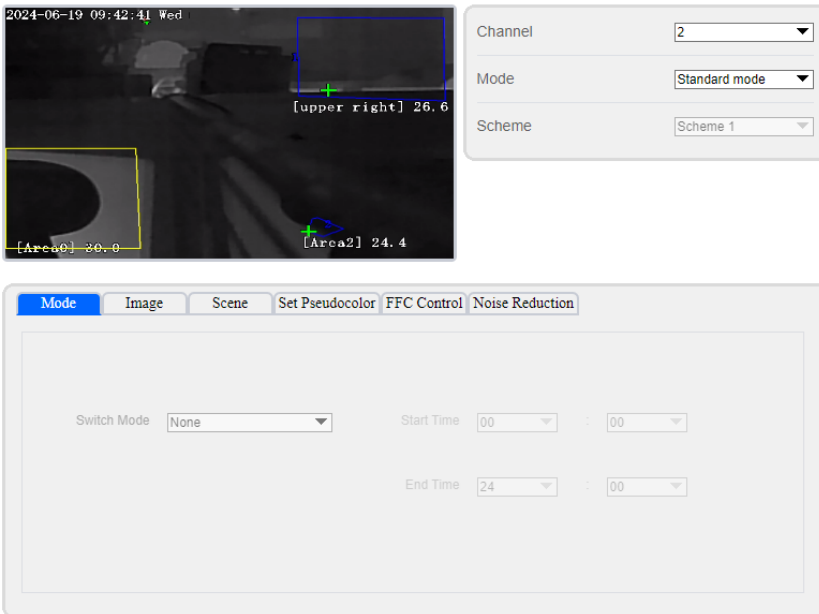

2024-06-19 09:42:41 Wed

[Area0] 20.9

[Area1] 26.6

[Area2] 24.4

Channel: 2

Mode: Standard mode

Scheme: Scheme 1

Mode | Image | Scene | Set Pseudocolor | FFC Control | Noise Reduction

Switch Mode: None

Start Time: 00 : 00

End Time: 24 : 00

## 5.2 Mode

### Operation Procedure

Step 1 In Image Settings page, go to Mode and then choose “Debug Mode”.


Step 2 Go to “Mode” tab.

Step 3 Choose “Switch Mode” from the drop-down list.

Step 4 Time mode: Set Start Time and End Time.

Step 5 Click Save.


#### Image Settings

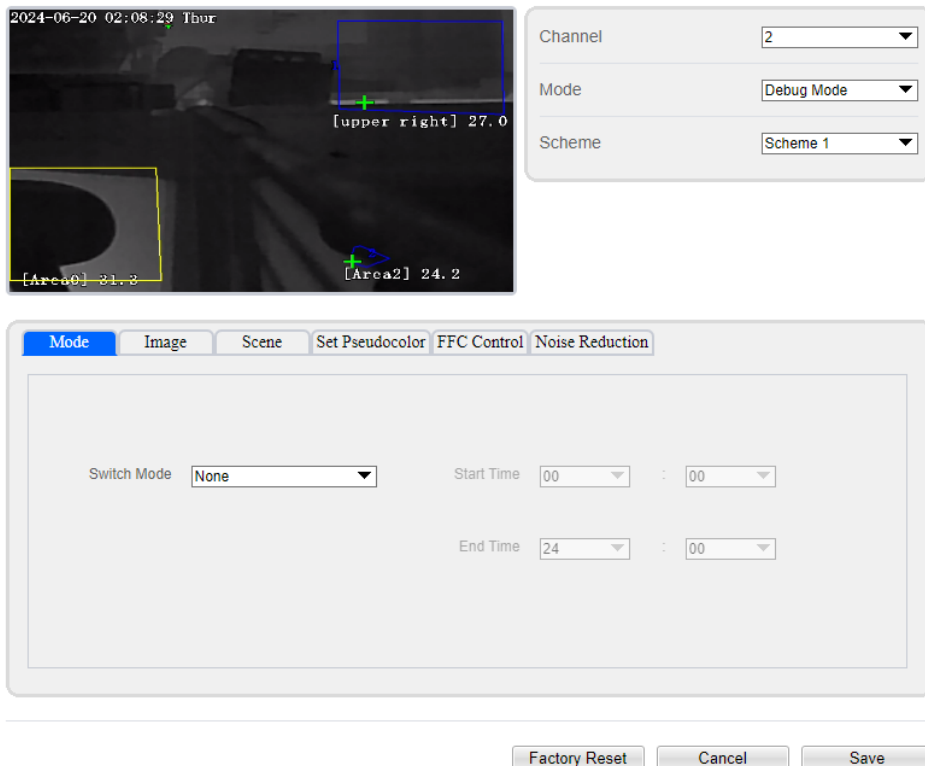

The screenshot displays the 'Image Settings' interface. At the top left, a camera view shows a dark scene with two detection areas: a blue box labeled '[upper right] 27.0' and a yellow box labeled '[Area0] 21.3'. A green crosshair is visible in the bottom right of the view, with a label '[Area2] 24.2'. To the right of the camera view is a configuration panel with three dropdown menus: 'Channel' set to '2', 'Mode' set to 'Debug Mode', and 'Scheme' set to 'Scheme 1'. Below this is a tabbed interface with tabs for 'Mode', 'Image', 'Scene', 'Set Pseudocolor', 'FFC Control', and 'Noise Reduction'. The 'Mode' tab is active, showing a 'Switch Mode' dropdown set to 'None', and 'Start Time' and 'End Time' fields. The 'Start Time' is set to 00:00 and the 'End Time' is set to 24:00. At the bottom right of the interface are three buttons: 'Factory Reset', 'Cancel', and 'Save'.

## 5.3 Image

- Step 1 In Image Settings page, go to Mode and then choose “Debug Mode”.
- Step 2 Go to Image tab.
- Step 3 Drag the slider to adjust parameter of image.
- Step 4 Click Save.

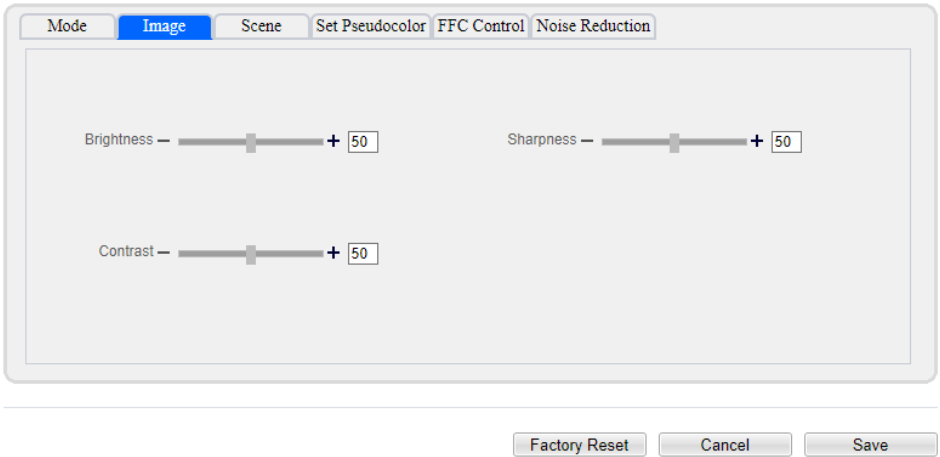

### NOTE


- **Brightness** :It indicates the total brightness of an image. As the value increases, the image becomes brighter. It ranges from 0 to 100.
- **Contrast** : It indicates the contrast between the bright part and the dark part of an image. As the value increases, the contrast increases. It ranges from 0 to 100.
- **Sharpness**: it indicates the contrast between definition and edge sharpness. The higher value, the higher definition and greater distortion. It ranges from 0 to 100

## 5.4 Scene

Step 1 In Scene tab.

Step 2 Choose mirror mode from drop-list.

Step 3 Click Save.

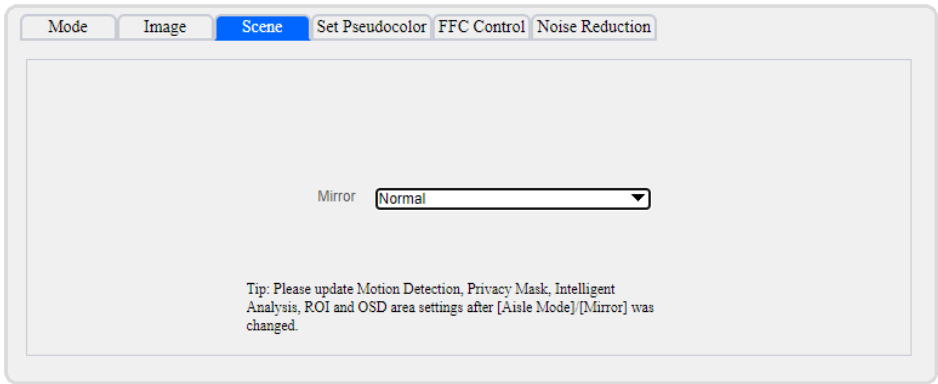

Factory Reset

Cancel


Save



### NOTE

- Mirror providing the selection of image pixel locations.
- Normal: the image is not flipped.
- Horizontal: the image is flipped left and right.
- Vertical: the image is flipped up and down.
- Horizontal + Vertical: the image is rotated at 180 degree.

## 5.5 Set Pseudocolor

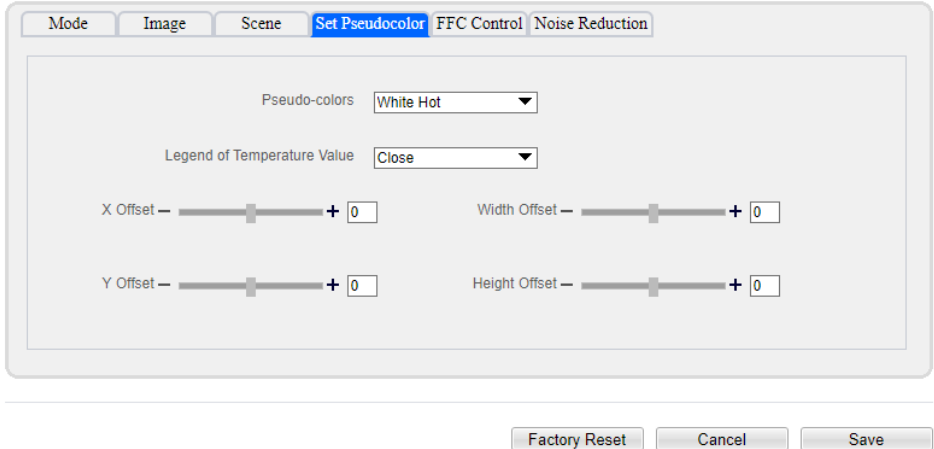

Step 1 In Set Pseudocolor tab.

Step 2 Choose Pseudo-color from drop-list.


Step 3 Enable or disable the legend of temperature value.

Step 4 Adjust location of Mix Stream.(Enable Mix Stream, at Configuration > Thermal > Temperature Parameters > Advanced interface.)


Step 5 Click Save.

 **NOTE**

- The temperatures of the temperature fields detected by the thermal imaging camera are separately mapped to values ranging from 0 to 255 by the algorithm. In the black/white display mode, this range is converted to the gray scale tones. For example, 0 indicates completely black, and 255 indicates completely white. The temperature field of the scene is converted to images by using the grayscale ranging from 0 to 255. Different polarity modes can be converted to different display images. The most common setting is white hot (a hotter object is displayed brighter than a colder object) or black hot (a hotter object is displayed darker than a colder object). The difference between two modes lies in that the temperatures corresponding to the darker one and the lighter one are reversed. Other modes include rainbow, ironbow, HSV, autumn, bone and so on.




## 5.6 FFC Control

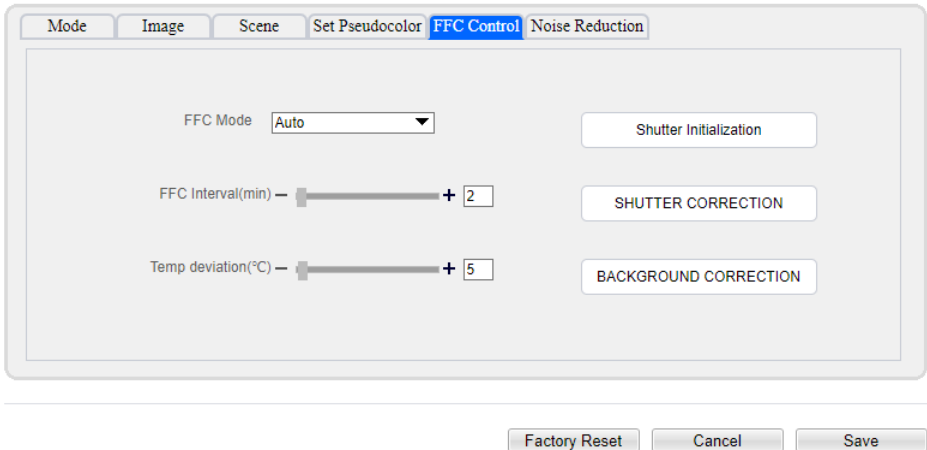

Parameter	Description	Setting
FFC Mode	<p>The internal of the thermal imaging camera may comprise the mechanical action correction mechanism that can periodically improve the image quality. This component is called flat field correction (FFC). When controlling the FFC, the FFC shields the sensor array, so that each portion of the sensor can collect uniform temperature fields (flat field). By means of FFC, the camera can update the correction coefficients to output more uniform images. Throughout the FFC process, the video image is frozen for two seconds and a static-frame image is displayed. After the FFC is complete, the image is automatically recovered. Repeated FFC operations can prevent the grainy and image degradation problems. The FFC is especially important when the temperature of the camera changes. For example, after the camera is powered on or the ambient temperature is changed, you should immediately perform the FFC.</p> <p><b>Auto:</b> In the Automatic FFC mode, the camera performs FFC whenever its temperature changes by a specified amount or at the end of a specified period of time (whichever comes first). When this mode is selected, the FFC interval (minutes)</p>	<p>[How to set] Select from the drop-down list box. [Default value] Auto</p>

Parameter	Description	Setting
	<p>ranges from 5 to 30 minutes. The temperature change of the camera is based on the temperatures collected by the internal temperature probe. The temperature of the camera sharply changes when the camera is powered on. The FFC is relatively frequent, which is normal.</p> <p><b>Manual:</b> In the manual FFC mode, the camera does not automatically perform the FFC based on the temperature change or the specified period. You can press the Do FFC button to select the manual FFC mode. When you feel that the image is obviously degraded but the automatic FFC is not performed, you can use the manual FFC function to check whether the image quality can be improved.</p>	
FFC interval (min)	In the automatic FFC mode, the FFC interval ranges from 10 to 255 minutes. When the time reach to setting value, the camera does shutter adjust operation automatically.	<p>[How to set]            Select by dragging the slider.            [Default value]            2</p>
Temp deviation	In the automatic FFC mode, the temp deviation value ranges from 2 to 255 degree centigrade. When the time reach to setting value, the camera does background adjust operation automatically.	<p>[How to set]            Select by dragging the slider.            [Default value]            5</p>
Shutter initialization	Click the icon and shutter will be initialized	Manually
Shutter adjust	Click the icon and camera perform the action.	Manually
Background adjust	Click the icon and camera perform the action.	Manually

## 5.7 Noise Reduction

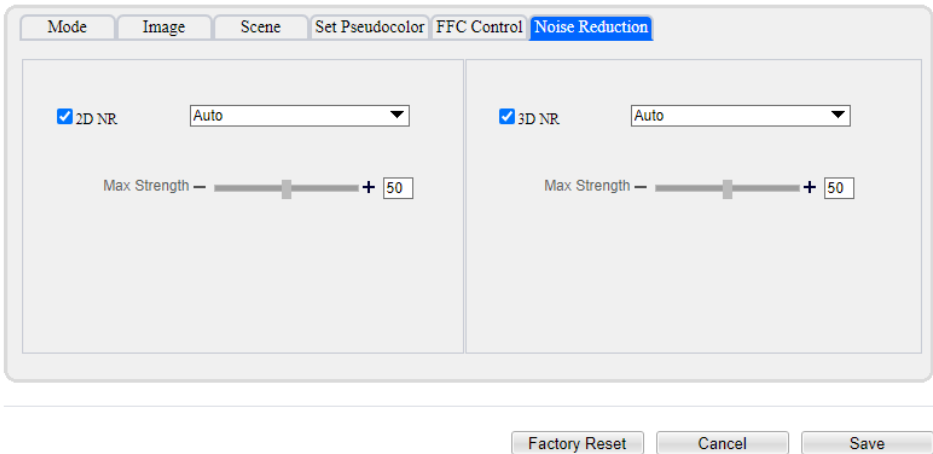

Parameter	Description	Setting
2DNR	Decrease the image noise.	[How to set] Select from the drop-down list box.
3DNR	Decrease the image noise.	[How to set] Select from the drop-down list box.



# 6 Intelligent Analysis

---

There are many kinds of intelligent analysis, such as **Intrusion, Single Line Crossing, Double Line Crossing, Multi-Loitering, Retrograde, Enter Area, Leave Area**. The parameters of these analysis alarm are roughly similar, so we will describe someone in detail as a reference.

**Intrusion:** The Intrusion function refers to that an alarm is generated when target objects (such as person, car, and both person and car) enter the deployment area.

**Single Line Crossing:** A Single Line Crossing is a line that is set at a concerned position within the monitored field of view and specifies the forbidden travel direction; An alarm is generated when the targets of specified types (such as person or car) cross this line.

**Double Line Crossing:** Double Line Crossing refers to two lines that are set at a concerned special position within the field of view and specify the forbidden travel direction. When the targets of specified types (such as person or car) move along the set travel direction and cross these lines in a certain order (line 1 followed by line 2) in pass max time, an alarm is generated.

**Multi-Loitering:** Multi-Loitering allows setting the shortest loitering time for multiple targets of specified type (such as person or car) within the deployment area in the field of view. When the loitering time of the multiple targets within this area meets the set shortest loitering time, an alarm is generated.

**Retrograde:** Retrograde allows setting the travel direction criteria for a target within an area on the video screen. When a target of specified type (such as people or car) within this area moves in the set travel direction, an alarm is generated.

**Enter Area:** The enter area refers to that an alarm is generated when a target enters the deployment area at the valid time.


**Leave Area:** The leave area refers to that an alarm is generated when a target leaves the deployment area at the valid time.

## 6.1 Intrusion

Procedure

Step 1 Go to **Configuration > Intelligent Analysis > Intrusion**.

 Intrusion

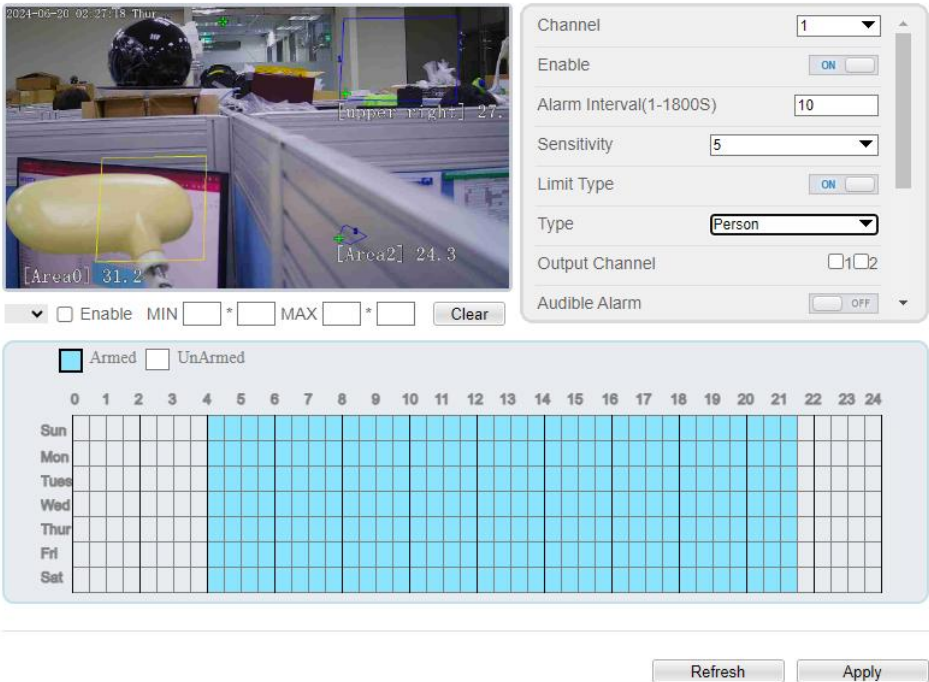

The screenshot displays the Intrusion configuration interface. On the left, a video feed shows a warehouse interior with yellow detection boxes around a person and a yellow object. The interface includes a configuration panel on the right with the following settings:

- Channel: 1
- Enable: ON
- Alarm Interval(1-1800S): 10
- Sensitivity: 5
- Limit Type: ON
- Type: Person
- Output Channel:  1  2
- Audible Alarm: OFF

Below the configuration panel is a weekly schedule grid. The grid has columns for days 0-24 and rows for days of the week (Sun-Sat). The 'Armed' status is checked, and the grid shows the system is armed from day 4 to day 21.

Buttons for 'Refresh' and 'Apply' are located at the bottom right of the interface.

Step 2 Set all parameters for Intrusion. The table describes the specific parameters.

Parameter	Description	Setting
Channel	Channel 1: visible. Channel 2: thermal.	Choose one channel to set.
Enable	Enable the button to enable the alarm.	[How to set] Click Enable to enable. [Default value] <b>OFF</b>
Sensitivity	The sensitivity of detecting smoker, when the value is high, the alarm can be triggered easily, but the accuracy will be lower.	[How to set] Choose from the drop-down list [Default value] <b>5</b>

Parameter	Description	Setting
Limit Type	<p>Effective alarms are set based on target type, with options of <b>Person or Car, Person, Car</b>.</p> <p>When the device is used indoors, because of small space and large targets, to avoid wrong alarms are triggered by person even if car is selected, it is recommended to set the target type to person for indoor use.</p>	<p>[How to set]            Click to enable Limit Target Type.            [Default value]  <b>OFF</b></p>
Output Channel	<p>If you check to set the Output Channel and the device is connected to an external alarm indicator, the alarm indicator signals when an alarm is triggered.</p>	<p>[How to set]            Click to select an ID.</p>
Audible alarm	<p>Enable, when an alarm occurs, it will play audio to alarm.            Choose the audible alarm file (set at the “<b>Configuration &gt; Alarm &gt; Audible Alarm Output</b>”).</p>	<p>[How to set]            Click to enable Audible alarm            [Default value]  <b>OFF</b></p>
Flashlight alarm	<p>Enable, when it is triggered alarm, it flashes the light. But when users set the display mode to Mode 5 at “<b>Configuration &gt; Thermal &gt; Led Control Param</b>” interface, the light will be always on for 15s, not flash when it is alarm.</p>	<p>[How to set]            Click to enable Flashlight Alarm.            [Default value]  <b>OFF</b></p>
SMTP	<p>Enable the button to enable SMTP server.</p>	<p>[How to set]            Click to enable SMTP.            [Default value]  <b>OFF</b></p>
FTP Upload	<p>Enable the button to enable File Transfer Protocol.</p>	<p>[How to set]            Click to enable FTP Upload.            [Default value]  <b>OFF</b></p>
Video Stream Draw Line	<p>Enable this option to show the detection zone on live video.</p>	<p>[How to set]            Click to enable Video Stream Draw Line            [Default value]  <b>OFF</b></p>

Step 3 Set a deployment area. Move the cursor to the drawing interface and click to generate a point, move the cursor to draw a line, and then click to generate another point. This is how a line is generated. In this way, continue to draw lines to form any shape, and right-click to finish line drawing.


 **NOTE**

- A drawn line cannot cross another one, or the line drawing fails.
- Any shape with 8 sides at most can be drawn.
- The quantity of deployment areas is up to 8.

Step 4 Set deployment time.


**Method 1:** Click left mouse button to select any time point within 0:00-24:00 from Monday to Sunday as shown in 0.


**Method 2:** Hold down the left mouse button, drag and release mouse to select the deployment time within 0:00-24:00 from Monday to Sunday.

**Method 3:** Click  in the deployment time page to select the whole day or whole week.

 **NOTE**

- When you select time by dragging the cursor, the cursor cannot be moved out of the time area. Otherwise, no time can be selected.

**Deleting deployment time:** Click  again or inverse selection to delete the selected deployment time.

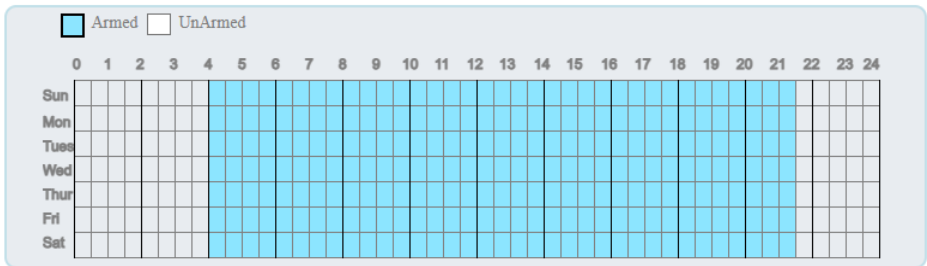

Step 5 Click **Apply** to save the settings.

## 6.2 Single Line Crossing

### Procedure

Step 1 Select **Configuration > Intelligent Analysis > Single Line Crossing**.

#### Single Line Crossing

Channel: 1

Enable:  ON

Alarm Interval(1-1800S): 10

Limit Type:  OFF

Output Channel:  1  2

Audible Alarm:  OFF

Flashlight Alarm:  OFF

Alarm Record:  OFF

Armed  UnArmed

0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24

Sun  
 Mon  
 Tues  
 Wed  
 Thur  
 Fri  
 Sat

Refresh Apply

Step 2 Set all parameters for the Single Line Crossing.

Parameter	Description	Setting
Channel	Channel 1: visible. Channel 2: thermal.	[How to set] Choose one channel to set.

Parameter	Description	Setting
Enable	Enable the button to enable the alarm.	[How to set] Click <b>Enable</b> to enable. [Default value] <b>OFF</b>
Limit Type	Effective alarms are set based on target type, with options of Person or Car, person, car. When the device is used indoors, because of small space and large targets, alarms are triggered by person sometimes even if car is selected, leading to false alarms. It is recommended to set the target type to person for indoor use.	[How to set] Click to enable Limit Target Type. [Default value] <b>OFF</b>
Output Channel	If you check to set the Output Channel and the device is connected to an external alarm indicator, the alarm indicator signals when an alarm is triggered.	[How to set] Click to select an ID.
Audible alarm	Enable, when an alarm occurs, it will play audio to alarm. Choose the audible alarm file (set at the “ <b>Configuration &gt; Alarm &gt; Audible Alarm Output</b> ”).	[How to set] Click to enable Audible alarm [Default value] <b>OFF</b>
Flashlight alarm	Enable, when it is triggered alarm, it flashes the light. But when users set the display mode to Mode 5 at “ <b>Configuration &gt; Thermal &gt; Led Control Param</b> ” interface, the light will be always on for 15s, not flash when it is alarm.	[How to set] Click to enable Flashlight Alarm. [Default value] <b>OFF</b>

Parameter	Description	Setting
SMTP	Enable the button to enable SMTP server.	[How to set] Click to enable SMTP. [Default value] <b>OFF</b>
FTP Upload	Enable the button to enable File Transfer Protocol.	[How to set] Click to enable FTP. [Default value] <b>OFF</b>
Video Stream Draw Line	Enable this option to show the detecting zone on live video.	[How to set] Click to enable Video Stream Draw Line. [Default value] <b>OFF</b>

Step 3 Set a deployment area:

**Draw a line:** Move the cursor to the drawing interface, hold down the left mouse button, and move the cursor to draw a line. When you release the left mouse button, a Single Line Crossing is generated.

**Setting a Single Line Crossing:** Click a line (and the trip line turns red) to select the Single Line Crossing and set its direction as Positive, Reverse or Bidirectional, or delete the selected line. You can also press and hold left mouse button at the endpoint of a Single Line Crossing and move the mouse to modify the position and length of this Single Line Crossing. You can right-click to delete the Single Line Crossing.



**NOTE**

- Try to draw the Single Line Crossing in the middle, because the recognition of a target takes time after target appearance on the screen and an alarm is generated only when the object is recognized to have crossed the Single Line Crossing.
- The Single Line Crossing which detects person foot as the recognition target cannot be too short, because a short Single Line Crossing tends to miss targets.

Step 4 Set deployment time.


Step 5 Click **Apply** to save the settings.

## 6.3 Double Line Crossing

### Procedure

#### Step 1 Select **Configuration > Intelligent Analysis > Double Line Crossing**

#### Double Line Crossing



Reverse ▼    Clear

Limit type  OFF

Output Channel  1  2

Audible Alarm  OFF

Flashlight Alarm  OFF

Alarm Record  OFF

SMTTP  OFF

FTP Upload  OFF

Video Stream Draw Line  OFF

Armed     UnArmed

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Sun																									
Mon																									
Tue																									
Wed																									
Thur																									
Fri																									
Sat																									

Refresh
Apply

#### Step 2 Set all parameters for the Double Line Crossing

Parameter	Description	Setting
Enable	Enable the button to enable the alarm.	[How to set] Click to enable. [Default value] <b>OFF</b>



Parameter	Description	Setting
Limit Type	Effective alarms are set based on target type, with options of Person or Car, person, car. When the device is used indoors, because of small space and large targets, alarms are triggered by person sometimes even if car is selected, leading to false alarms. It is recommended to set the target type to person for indoor use.	[How to set] Click to enable Limit Target Type. [Default value] <b>OFF</b>
Output Channel	If you check to set the Output Channel and the device is connected to an external alarm indicator, the alarm indicator signals when an alarm is triggered.	[How to set] Click to select an ID.
Audible alarm	Enable, when an alarm occurs, it will play audio to alarm. Choose the audible alarm file (set at the <b>“Configuration &gt; Alarm &gt; Audible Alarm Output”</b> ).	[How to set] Click to enable Audible alarm [Default value] <b>OFF</b>
Flashlight alarm	Enable, when it is triggered alarm, it flashes the light. But when users set the display mode to Mode 5 at <b>“Configuration &gt; Thermal &gt; Led Control Param”</b> interface, the light will be always on for 15s, not flash when it is alarm.	[How to set] Click to enable Flashlight Alarm. [Default value] <b>OFF</b>
SMTP	Enable the button to enable SMTP server.	[How to set] Click to enable SMTP. [Default value] <b>OFF</b>
FTP Upload	Enable the button to enable File Transfer Protocol.	[How to set] Click to enable FTP. [Default value] <b>OFF</b>
Video Stream Draw Line	Enable this option to show the detection zone on live video.	[How to set] Click to enable Video Stream Draw Line [Default value] <b>OFF</b>

Step 3 Set a deployment area.

**Draw a line:** Move the cursor to the drawing interface, hold down the left mouse button, and move the cursor to draw two lines. When you release the left mouse button, two numbered virtual fences are generated. Choose either of the Double Line Crossing to set the direction to Positive or Reverse.

**Set Double Line Crossing:** Click one of the Double Line Crossing (and the virtual fence turns red) to select this virtual fence and set the direction to **Positive** or **Reverse**, or delete the selected line. You can also press and hold left mouse button at the endpoint of a virtual fence and move the mouse to modify the position and length of this virtual fence. You can right-click to delete the Double Line Crossing.



#### NOTE

- The two lines are in sequential order. An alarm is generated only when a target crosses virtual fence 1 and then virtual fence 2 within the set maximum passing time.
- Try to draw Double Line Crossing in the middle, because the recognition of a target takes time after target appearance on the screen and an alarm is generated only when the object is recognized to have crossed the Double Line Crossing.
- The Double Line Crossing detection distance cannot be too short. This feature detects and sees human foot as the recognition target. The short detection distance may miss targets.

Step 4 Set deployment time.

Step 5 Click **Apply** to save the settings.

## 6.4 Enter Area / Leave Area


### Description

The enter area refers to that an alarm is generated when a target enter the deployment area at the valid time.

### Procedure

Step 1 Select **Configuration > Intelligent Analysis > Enter Area / Leave Area**.

 Enter Area



2024-09-21 13:06:22 Fri

Area0: 44.4

1  Enable MIN 72 \* 85 MAX 144 \* 85

Channel

Enable  ON

Alarm Interval(1-1800S)

Sensitivity

Limit Type  OFF

Output Channel  1  2

Audible Alarm  OFF


Flashlight Alarm  OFF

Armed  UnArmed

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Sun																									
Mon																									
Tues																									
Wed																									
Thur																									
Fri																									
Sat																									

Leave Area

 Leave Area



2024-09-21 13:07:07 Fri

Area0: 44.4

1  Enable MIN 72 \* 85 MAX 144 \* 85

Channel

Enable  ON

Alarm Interval(1-1800S)

Sensitivity

Limit Type  OFF

Output Channel  1  2

Audible Alarm  OFF

Flashlight Alarm  OFF

Armed  UnArmed

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Sun																									
Mon																									
Tues																									
Wed																									
Thur																									
Fri																									
Sat																									

Step 2 Set all parameters for Enter Area / Leave Area.

Step 3 Set a deployment area.

Move the cursor to the drawing interface and click to generate a point, move the cursor to draw a line, and then click to generate another point. This is how a line is generated. In this way, continue to draw lines to form any shape, and right-click to finish line drawing.



**NOTE**

- A drawn line cannot cross another one, or the line drawing fails.

Step 4 Set deployment time

Step 5 Set actions.

Step 6 Click **Apply** to save the settings.

**---End**

# 7 Advanced Intelligent Analysis

---

At the advanced intelligent analysis interface, users can set the parameters of smoker detection, smoke and flame detection, and fire spot detection. Enable the linkage actions, the alarm information can be sent to user by the linkage.

The advanced intelligent analysis can be used for detecting the smoking, e.g., if someone is smoking in an area where smoking is forbidden.

**Smoke and Flame Detection** can be used for detecting smoke and fire, it can send alarm information to avoid fire getting worse.

**Fire Spot Detection** can be used for finding the catching fire to quickly operate to extinguish.


## 7.1 Smoker Detection


### Description

The smoker detection function refers to that an alarm is generated when someone is smoking or generating spark in the deployment area.

### Procedure

Step 1 Select **Configuration > Advanced Intelligent Analysis > Smoker Detection**.

 Smoker Detection



Output Channel 1\_1\_2

Audible Alarm  OFF

Flashlight Alarm  OFF

Sensitivity

Alarm Record  OFF

SMTP  OFF

FTP Upload  OFF

Video Stream Draw Line  ON

Armed  UnArmed

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Sun																									
Mon																									
Tues																									
Wed																									
Thur																									
Fri																									
Sat																									

Step 2 Set all parameters for Smoker Detection.

Parameter	Description	Setting
Enable	At thermal channel, Enable the button to enable the alarm.	[How to set] Click Enable to enable. [Default value] <b>OFF</b>
Output Channel	If you check to set the Output Channel and the device is connected to an external alarm indicator, the alarm indicator signals when an alarm is triggered.	[How to set] Click to select an ID.
Audible alarm	Enable, when an alarm occurs, it will play audio to alarm. Choose the audible alarm file (set at the “ <b>Configuration &gt; Alarm &gt; Audible Alarm Output</b> ”).	[How to set] Click to enable Audible alarm [Default value] <b>OFF</b>

Parameter	Description	Setting
Flashlight alarm	Enable, when it is triggered alarm, it flashes the light. But when users set the display mode to Mode 5 at <b>“Configuration &gt; Thermal &gt; Led Control Param</b> “interface, the light will be always on for 15s, not flash when it is alarm.	[How to set] Click to enable Flashlight Alarm. [Default value] <b>OFF</b>
Sensitivity	The sensitivity of detecting smoker, when the value is high, the alarm can be triggered easily, but the accuracy will be lower.	[How to set] Choose from the drop-down list [Default value] <b>5</b>
SMTP	Enable the button to enable SMTP serve.	[How to set] Click to enable SMTP. [Default value] <b>OFF</b>
FTP Upload	Enable the button to enable File Transfer Protocol.	[How to set] Click to enable FTP Upload. [Default value] <b>OFF</b>
Video Stream Draw Line	Enable this option to show the detection zone on live video.	[How to set] Click to enable Video Stream Draw Line [Default value] <b>OFF</b>

Step 3 Set a deployment area. Move the cursor to the drawing interface and click to generate a point, move the cursor to draw a line, and then click to generate another point. This is how a line is generated. In this way, continue to draw lines to form any shape, and right-click to finish line drawing.



**NOTE**

- A drawn line cannot cross another one, or the line drawing fails.
- Any shape with 32 sides at most can be drawn.
- The quantity of deployment areas is up to 8.

Step 4 Set deployment time.

Step 5 Click **Apply** to save the settings.

## 7.2 Smoke and Flame Detection


### Description

The smoke flame detection function refers to that an alarm is generated when something is smoking or generating flame in the deployment area.

### Procedure

Step 1 Select **Configuration > Advanced Intelligent Analysis > Smoke and Flame Detection**.

#### Smoke and Flame Detection

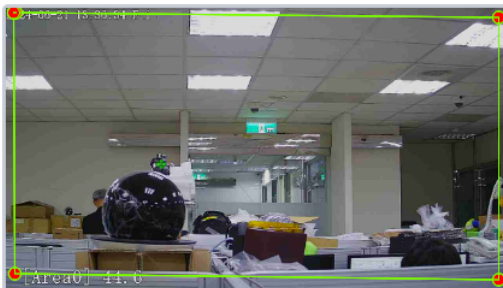

Clear

Enable	<input checked="" type="checkbox"/> ON
Alarm Interval(1-1800S)	<input type="text" value="10"/>
Output Channel	<input type="checkbox"/> 1 <input type="checkbox"/> 2
Audible Alarm	<input type="checkbox"/> OFF
Flashlight Alarm	<input type="checkbox"/> OFF
Sensitivity	<input type="text" value="5"/>
Alarm Record	<input type="checkbox"/> OFF
SMTP	<input type="checkbox"/> OFF

Armed  UnArmed

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Sun																									
Mon																									
Tues																									
Wed																									
Thur																									
Fri																									
Sat																									

Refresh

Apply

Step 2 Set all parameters for Smoke and Flame Detection.



Parameter	Description	Setting
Enable	At thermal channel, Enable the button to enable the alarm.	[How to set] Click Enable to enable. [Default value] <b>OFF</b>
Output Channel	If you check to set the Output Channel and the device is connected to an external alarm indicator, the alarm indicator signals when an alarm is triggered.	[How to set] Click to select an ID.
Audible alarm	Enable, when an alarm occurs, it will play audio to alarm. Choose the audible alarm file (set at the “ <b>Configuration &gt; Alarm &gt; Audible Alarm Output</b> ”).	[How to set] Click to enable Audible alarm [Default value] <b>OFF</b>
Flashlight alarm	Enable, when it is triggered alarm, it flashes the light. But when users set the display mode to Mode 5 at “ <b>Configuration &gt; Thermal &gt; Led Control Param</b> ” interface, the light will be always on for 15s, not flash when it is alarm.	[How to set] Click to enable Flashlight Alarm. [Default value] <b>OFF</b>
Sensitivity	The sensitivity of detecting smoker, when the value is high, the alarm can be triggered easily, but the accuracy will be lower.	[How to set] Choose from the drop-down list [Default value] 5
SMTP	Enable the button to enable SMTP serve.	[How to set] Click to enable SMTP. [Default value] <b>OFF</b>
FTP Upload	Enable the button to enable File Transfer Protocol.	[How to set] Click to enable FTP Upload. [Default value] <b>OFF</b>

Parameter	Description	Setting
Video Stream Draw Line	Enable this option to show the detection zone on live video.	[How to set] Click to enable Video Stream Draw Line [Default value] <b>OFF</b>

Step 3 Set a deployment area. Move the cursor to the drawing interface and click to generate a point, move the cursor to draw a line, and then click to generate another point. This is how a line is generated. In this way, continue to draw lines to form any shape, and right-click to finish line drawing.



#### NOTE

- A drawn line cannot cross another one, or the line drawing fails.
- Any shape with 8 sides at most can be drawn.
- The quantity of deployment areas is up to 8.

Step 4 Set actions accordingly.

Step 5 Set deployment time.

Step 6 Click **Apply** to save the settings.


## 7.3 Fire Spot Detection


### Description

The fire spot detection function refers to that an alarm is generated when something is on fire at the deployment area.

### Procedure

Step 1 Select **Configuration > Advanced Intelligent Analysis > Fire Spot Detection**.

 Fire Spot Detection

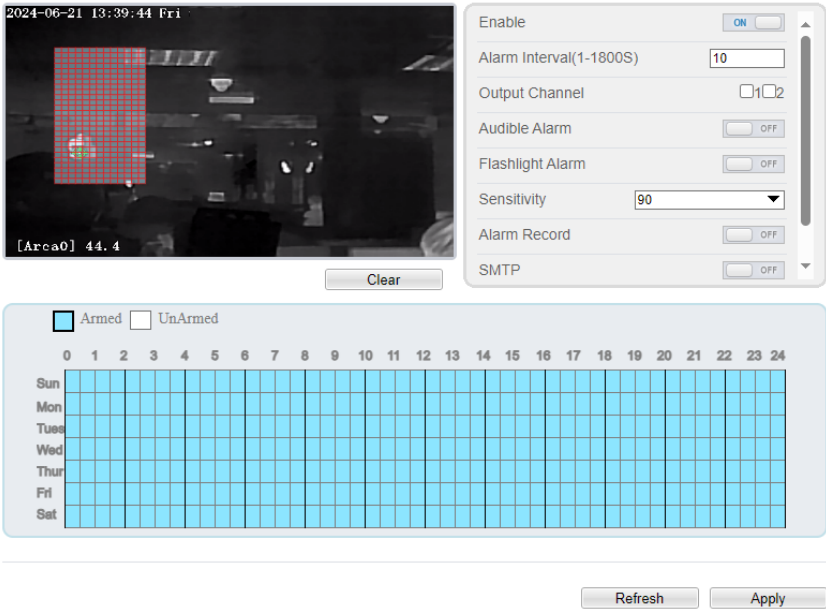

The screenshot shows the Fire Spot Detection configuration page. On the left is a video feed with a red grid overlay and a 'Clear' button below it. On the right is a settings panel with the following options: 'Enable' (ON), 'Alarm Interval(1-1800S)' (10), 'Output Channel' (checkboxes for 1 and 2), 'Audible Alarm' (OFF), 'Flashlight Alarm' (OFF), 'Sensitivity' (90), 'Alarm Record' (OFF), and 'SMTP' (OFF). Below the settings is a calendar grid for scheduling, with 'Armed' (blue) and 'UnArmed' (white) options. The calendar shows a 24-hour grid for each day of the week. At the bottom right are 'Refresh' and 'Apply' buttons.

Step 2 Set all parameters for Fire Spot Detection.

Parameter	Description	Setting
Enable	At thermal channel, Enable the button to enable the alarm.	[How to set] Click Enable to enable. [Default value] <b>OFF</b>
Output Channel	If you check to set the Output Channel and the device is connected to an external alarm indicator, the alarm indicator signals when an alarm is triggered.	[How to set] Click to select an ID.
Audible alarm	Enable, when an alarm occurs, it will play audio to alarm. Choose the audible alarm file (set at the “ <b>Configuration &gt; Alarm &gt; Audible Alarm Output</b> ”).	[How to set] Click to enable Audible alarm [Default value] <b>OFF</b>

Parameter	Description	Setting
Flashlight alarm	Enable, when it is triggered alarm, it flashes the light. But when users set the display mode to Mode 5 at “ <b>Configuration &gt; Thermal &gt; Led Control Param</b> ” interface, the light will be always on for 15s, not flash when it is alarm.	[How to set] Click to enable Flashlight Alarm. [Default value] <b>OFF</b>
Sensitivity	The sensitivity of detecting smoker, when the value is high, the temperature of triggering alarm is lower; When the value is low, the temperature of triggering alarm is higher.	[How to set] Choose from the drop-down list [Default value] <b>90</b>
SMTP	Enable the button to enable SMTP serve.	[How to set] Click to enable SMTP. [Default value] <b>OFF</b>
FTP Upload	Enable the button to enable File Transfer Protocol.	[How to set] Click to enable FTP Upload. [Default value] <b>OFF</b>
Video Stream Draw Line	Enable this option to show the detection zone on live video.	[How to set] Click to enable Video Stream Draw Line [Default value] <b>OFF</b>

### Step 3 Set a deployment area.

Use mouse to draw rectangular area, you can set several area to deploy, as shown in the following picture0.

### Set Deployment Area



 **NOTE**

- A drawn line cannot cross another one, or the line drawing fails.
- Any shape with 8 sides at most can be drawn.
- The quantity deployment areas is up to 8.

Step 4 Set actions accordingly.


Step 5 Set deployment time.

Step 6 Click **Apply** to save the settings.

**---End**

# 8 AI Multi-object

Step 1 At “ Configuration > AI Multiobject ” interface, user can enable full-body detection, vehicle detection to detect the person and vehicle.

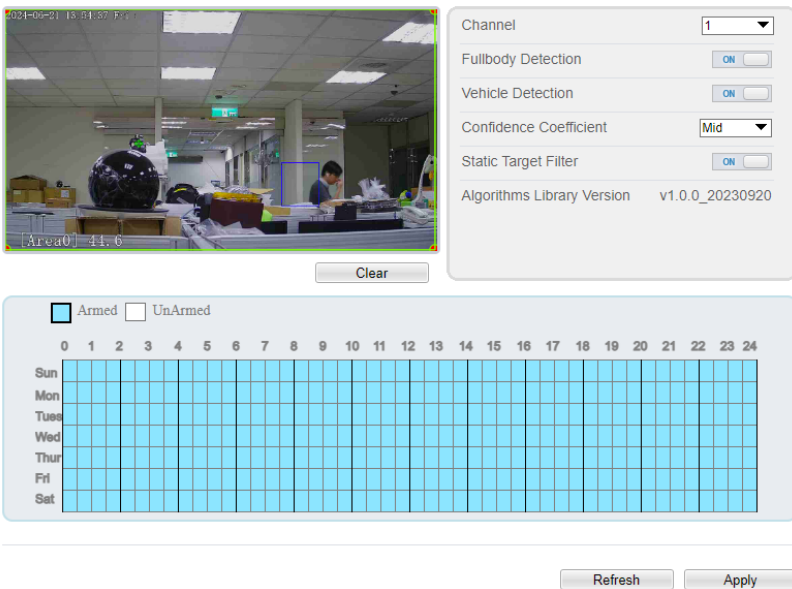

Step 2 Set the parameters of AI multiobject.

Parameter	Description	How to set
Channel	Channel 1 is visible channel. Channel 2 is thermal channel.	Choose from drop list.
Full body detection	The camera will snap the whole body when someone appear in live video. The detection frame is blue.	Enable
Vehicle	The camera will snap the license when the vehicle	Enable

Parameter	Description	How to set
detection	appear in live video. The detection frame is yellow.	
Confidence Coefficient	The range of snap image, there are three type, such as high, mid and low. The higher the confidence, the better the snap quality and the fewer snapshots.	Choose from drop list.
Static Target Filter	If the target is static, the device will filter this target. For example, if a car stop for long time, the device will be filtered.	Enable

Step 3 Draw the detection area by using the mouse.

Step 4 Set the schedule, click “Apply” to save the settings.

**---End**

# 9 Alarm Setting

## 9.1 Alarm Output

### Procedure

Step 1 Select **Configuration > Alarm > Alarm Output** to access the **Alarm Output**.

#### Alarm Output

Alarm Output	1
Name	
Valid Signal	Disconnect
Alarm Output Mode	Switch Mode
Follow Source	<input type="checkbox"/> OFF
Alarm Time(ms)(0:Continuous)	0

Timing Alarm Output  OFF

Manual control

Step 2 Set alarm output of channel, name, enable valid signal and alarm time choose alarm output mode.

Step 3 You can also control alarm manually, click **Start** button to start alarm, click stop button to end the alarm .

**---End**




## 9.2 Disk Alarm

### Procedure

Step 1 Select **Configuration > Alarm > Disk Alarm** to access the disk alarm setting.

#### Disk Alarm

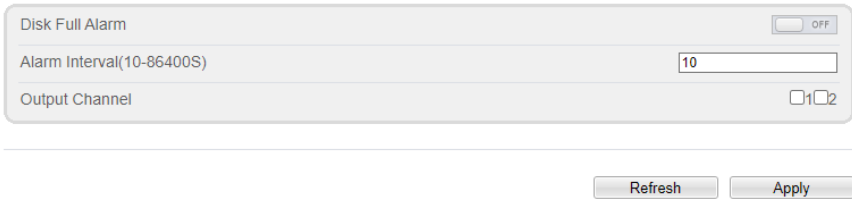

Disk Full Alarm  OFF

Alarm Interval(10-86400S)

Output Channel  1  2

Step 2 Enable the disk full alarm, when the disk is full it will alarm.

Step 3 Set alarm interval and tick output channel.

Step 4 Click **Apply** to save the settings, click refresh will return last settings.

**---End**

## 9.3 Network Alarm

### Procedure

Step 1 Select **Configuration > Alarm > Network Alarm**.

#### Network Alarm



Network Card ID

Abnormal Alarm  OFF

Step 2 Choose network card ID and enable exceptional alarm to set alarm interval. Tick output channel.

Step 3 Click **Apply** to save the settings, click refresh will return last settings.

**---End**

## 9.4 I/O Alarm Linkage

### Procedure

Step 1 Select **Configuration > Alarm > I/O Alarm Linkage**

#### I/O Alarm Linkage

Alarm Input 1 ▾

Name	<input style="width: 90%;" type="text"/>
Trigger Mode	Connect ▾
Alarm Input	<input type="checkbox"/> OFF
Output Channel	<input type="checkbox"/> 1 <input type="checkbox"/> 2
PTZ Linkage	<input type="checkbox"/> OFF
Alarm Record	<input type="checkbox"/> OFF
SMTP	<input type="checkbox"/> OFF

Armed
  UnArmed

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Sun																									
Mon																									
Tue																									
Wed																									
Thur																									
Fri																									
Sat																									

Step 2 Choose alarm input and trigger mode, set name, enable other linkages such as alarm input, Alarm Record SMTP, FTP upload, IR Cut and flashlight alarm.

Step 3 Set alarm schedule, choose the duration of linkage.

Step 4 Click **Apply** to save the settings, click refresh will return last settings.


---End

## 9.5 Motion Alarm

### Procedure

Step 1 Select **Configuration > Alarm > Motion Alarm**

### Motion Alarm

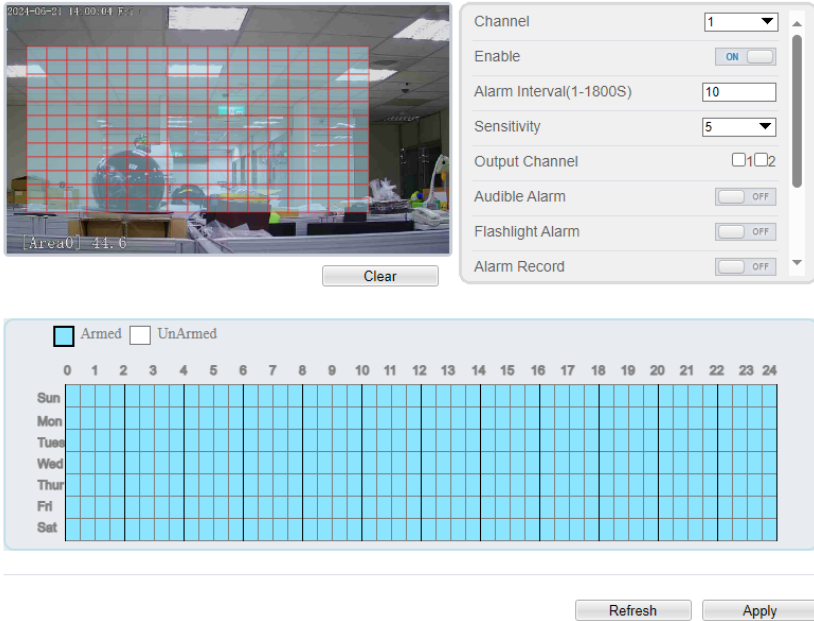

2021-09-21 14:09:04 Fri

Area0: 44.6

Clear

Channel: 1

Enable: ON

Alarm Interval(1-1800S): 10

Sensitivity: 5

Output Channel: 1 2

Audible Alarm: OFF

Flashlight Alarm: OFF

Alarm Record: OFF

Armed  UnArmed

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Sun	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed
Mon	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed
Tues	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed
Wed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed
Thur	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed
Fri	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed
Sat	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed	Armed

Refresh Apply

Step 2 Choose channel and enable the motion alarm, set alarm interval and sensitivity, enable other linkages such as SMTP, FTP upload and motion detect stream.

Step 3 Set motion alarm schedule,


Step 4 Click **Apply** to save the settings, click **Refresh** will return last settings.

**---End**

## 9.6 Audio Abnormal Detection

Procedure

Step 1 Select **Configuration > alarm > Audio Abnormal Detection**.

 **Abnormal Sound Detection**

Enable	<input type="checkbox"/> OFF
Sudden Rise	<input type="checkbox"/> OFF
Sudden Drop	<input type="checkbox"/> OFF
Output Channel	<input type="checkbox"/> 1 <input type="checkbox"/> 2
Alarm Record	<input type="checkbox"/> OFF
SMTP	<input type="checkbox"/> OFF
FTP Upload	<input type="checkbox"/> OFF

Armed  UnArmed

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Sun																									
Mon																									
Tue																									
Wed																									
Thur																									
Fri																									
Sat																									

- Step 2 Enable the audio abnormal detection, enable sudden rise or sudden drop.
- Step 3 Tick the output channel, enable alarm record, SMTP, FTP upload.
- Step 4 Set alarm schedule, choose the duration of linkage.
- Step 5 Click **Apply** to save the settings, click **Refresh** will return last settings.

**---End**

# 10 Other Web Configurations

---


## 10.1 Device Information

You can view the information about device at Device Information.

## 10.2 Stream

### 10.2.1 Base Stream

Step 1 Choose **Configuration > Stream >Base Stream**.

 Stream

---

Channel	1
Stream ID	1
Name	stream1
Video Encode Type	H265
Video Encode Level	Mid
Audio Encode Type	G711_ALAW
Resolution	1280x720
Frame Rate(fps)	12
I Frame Interval(Unit: Frame)	50
Bit Rate Type	CBR
Bit Rate(kbps)(100-8000)	2000
Smart Encode	<input type="checkbox"/> OFF

---

## Channel 2 (Thermal Channel) Stream

 Stream

Channel	2
Stream ID	1
Name	stream1
Video Encode Type	H264
Video Encode Level	Low
Audio Encode Type	G711_ALAW
Resolution	D1
Frame Rate(fps)	25
I Frame Interval(Unit: Frame)	50
Bit Rate Type	CBR
Bit Rate(kbps)(100-3000)	3000
Smart Encode	<input type="checkbox"/> OFF

Refresh

Apply

Step 2 Choose channel, stream ID, video encode type, video encode level, audio encode type, resolution, frame rate, frame interval, bit rate type and bit rate from all drop list.

Step 3 Set name of base stream, enable smart encode.


Step 4 Click **Apply**. The message "**Apply success**" is displayed, the system saves the settings.

**---End**

## 10.2.2 ROI

Step 1 Choose **Configuration > Stream >ROI**.

Figure 10-1 ROI Interface

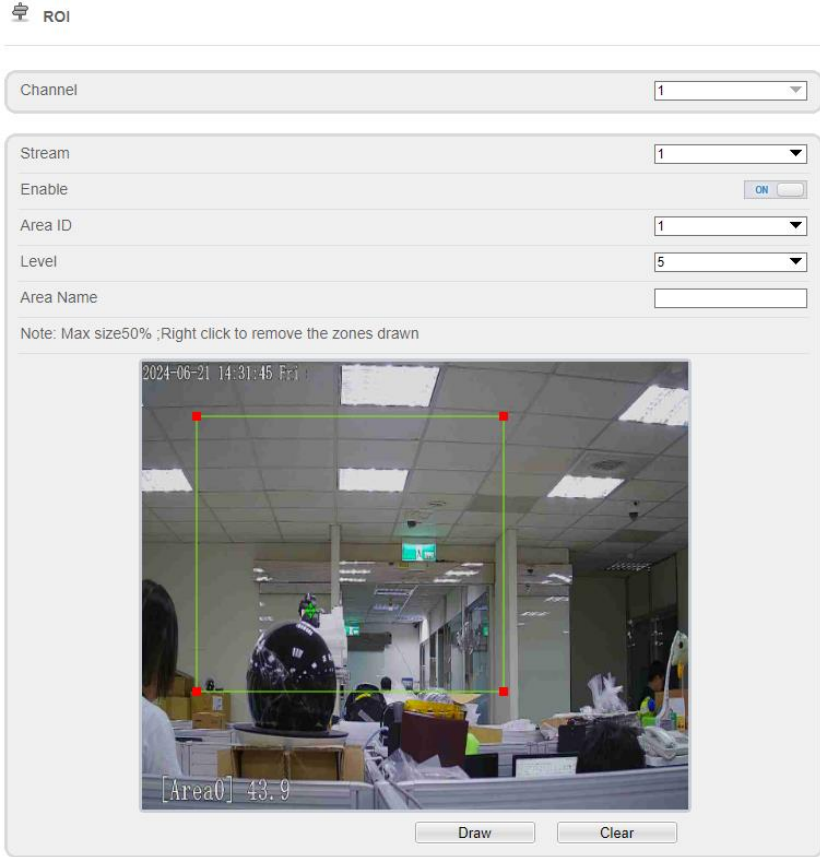

Step 2 Click **Draw** and the frame is showing, adjust the position of frame to set ROI area.  
Step 3 Click **Apply**. The message "**Apply success**" is displayed, the system saves the settings.

---End

### 10.2.3 Snapshot

Step 1 Choose **Configuration > Stream > Snapshot**.

## Snapshot

Channel	1
Snapshot Resolution	1280x720
Snapshot Quality	Mid

Step 2 Choose snapshot resolution and snapshot quality from drop list.

Step 3 Click **Apply**. The message "Apply success" is displayed, the system saves the settings.

**---End**

## 10.3 Device

You can set local network, device port, data and time, camera, OSD, Audio input, Audio output, CVBS, system, voice denoise and software licenses.

### Local Network

Network Card ID	1
IP Protocol	IPv4
DHCP	<input checked="" type="checkbox"/> ON
DHCP IP	10.66.4.109
Preferred DNS Server	10.135.1.51
Alternate DNS Server	10.135.101.51
MTU(1280-1500)	1500




## 10.4 Privacy Masking

Choose **Configuration > Privacy masking**.

You can set up a privacy mask by drawing an area and then clicking on Add. Modify the color if needed. Adding more privacy masks if needed.

### Privacy Masking

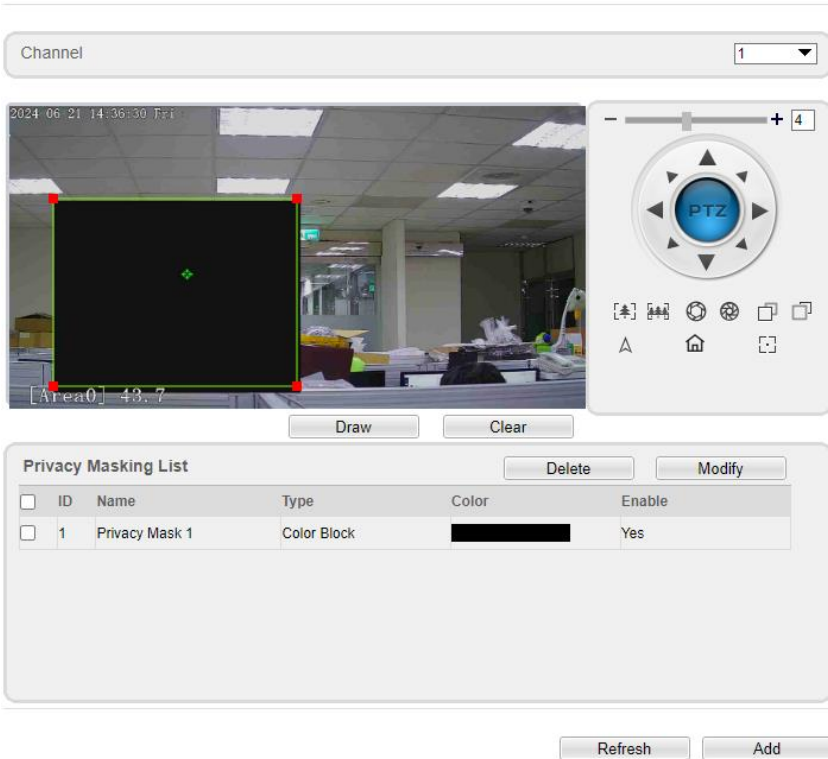


Channel: 1

2024-06-21 14:36:30 Fri

[Area0] 43, 7

Draw Clear

Privacy Masking List					Delete	Modify
<input type="checkbox"/>	ID	Name	Type	Color	Enable	
<input type="checkbox"/>	1	Privacy Mask 1	Color Block		Yes	

Refresh Add

## 10.5 Network Service

Choose **Configuration > Network Service**. You can set **802.1x**, **DDNS**, **PPPoE**, **Port mapping**, **SMTP**, **IP filter**, **CGI alarm service center**, **SNMP** and **QOS**.

### 10.5.1 QOS

## Description

If the device is connected to a router or switch with a QOS function, and the priority rule of the corresponding mark is configured on the network device, the network device will preferentially pass the data packet of the corresponding mark.

## Procedure

Step 1 Choose **Configuration > Network Service > QOS**.

 QOS

Audio/Video Dscp(0-63)	<input type="text" value="0"/>
Alarm Dscp(0-63)	<input type="text" value="0"/>
Command Dscp(0-63)	<input type="text" value="0"/>


Step 2 Input the value range from 0 to 63 (audio/video dscp, alarm dscp and command dscp).

Step 3 Click **Apply**.

The message "Apply success!" is displayed, and the system saves the settings.

## 10.6 Privacy Manager

Add user account, manage the users' permission.

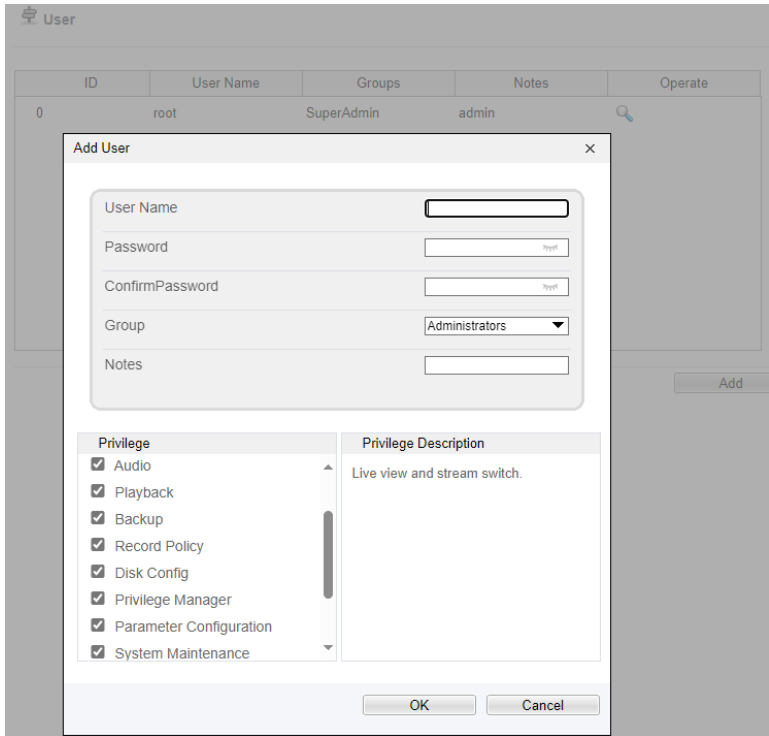

## 10.7 Protocol

Choose **Configuration > Protocol**.

You can set **protocol information, security** and **multicast parameter**.


 Protocol Info

Protocol Name	ONVIF
Protocol Version	v2.2.06
Protocol Software Version	v22.06_build000259
RTSP Format	rtsp://ip:port/sn/live/cameraid/streamid
RTSP Example	rtsp://10.66.4.130:554/sn/live/1/1
Onvif UUID	95786cf0-25ed-1289-9d7

## 10.8 Device Log

Choose **Configuration > Device Log**.

You can view **operation log** and **alarm log**, or collect all log information.

 Alarm Log

Alarm Type	All
Begin Time	2024-06-20 14:41:59
End Time	2024-06-21 14:41:59


Alarm Begin Time	Alarm End Time	Log Info	Source ID
2024-06-21 14:40:31	2024-06-21 14:41:43	Motion Detect Alarm	1
2024-06-21 14:38:26	2024-06-21 14:39:06	Motion Detect Alarm	1
2024-06-21 14:33:19	2024-06-21 14:37:04	Motion Detect Alarm	1
2024-06-21 14:27:23	2024-06-21 14:32:01	Motion Detect Alarm	1
2024-06-21 14:13:08	2024-06-21 14:26:12	Motion Detect Alarm	1
2024-06-21 14:02:00	2024-06-21 14:11:41	Motion Detect Alarm	1
2024-06-21 13:56:01	2024-06-21 14:00:56	Motion Detect Alarm	1
2024-06-21 13:47:50	2024-06-21 13:54:53	Motion Detect Alarm	1
2024-06-21 13:43:03	2024-06-21 13:46:28	Motion Detect Alarm	1
2024-06-21 13:39:31	2024-06-21 13:39:41	Smart Motion Alarm	1




K < 1 > >

## 10.9 Maintenance

Choose **configuration > maintenance**.

You can **restart, update, reserve IP setting and restore to factory default**.

 Camera Maintenance


Restart	
Auto Restart	<input type="checkbox"/> OFF 
Upgrade	Please select firmware file  Upgrade
Reserve IP Setting	<input type="checkbox"/> OFF
Restore to Factory Default	
Export Configuration	Download
Import Configuration	Please select file  Upload

## 10.10 Local Config

When users choose the plugin to play live video, this function can be set.

Choose **Configuration > Local Config**. You can change the save path of snapshot and local record, choose the playback performance.

 Local Config

SnapShot Save Path	<input type="text" value="C:\Users\Administrator\Downloads"/> 
Local Record Save Path	<input type="text" value="C:\Users\Administrator\Downloads"/> 
Play performance	real time 

## A Troubleshooting

Common Trouble	Possible Cause	Solution
Unable to access the web	Network is not connected.	Connect the network cable of the camera to the PC to check whether the network cable is in good contact.  Run the ping command to check the network connection and whether the device works normally.
	IP address is occupied.	Directly connect the camera to the PC, and reset the IP address of the camera.
	The IP addresses of the PC and the device are in different networks.	Check the IP address, subnet mask and gateway setting of the camera.
Intelligent Analysis - cannot show detection area on live video	"Video Stream Draw Line" isn't enabled.	Go to Intelligent Analysis, Event type, and then enable "Video Stream Draw Line".
Intelligent Analysis - event cannot be triggered by human or vehicle	"Limit Type" isn't enabled and configured.	Go to Intelligent Analysis, Event type, enable "Event Type" and then chose "Person, Car or Both".
The measured temperature is not accurate.	The device is just powered on, and the temperature of the cavity is unstable.	The temperature of the cavity is stable within 15 to 30 minutes after the device is powered on.
	The target configuration is incorrect.	Check whether the emission rate and distance of the target are configured correctly.

Common Trouble	Possible Cause	Solution
An error occurs in accessing the web of the device after the upgrade.	The data in the cache of browser is not updated in time.	Delete the cache of browser. The steps are as follows (taking Edge as an example): Open the Edge. Press Ctrl + Shift + Delete on keyboard. The <b>Delete Browsing History</b> dialog box appears. Select all check boxes. Click <b>Clear</b> to delete. Relogin the web page of the camera.
Upgrade failed.	No network cable is connected. The network setting is incorrect.	Ensure the upgrade network is connected. Check whether the network setting is correct.
	The upgrade package is incorrect.	Perform the correct upgrade package again.
The temperature is too high.	<ol style="list-style-type: none"> <li>1. Make sure ‘<b>thermal mapping</b>’ and ‘<b>thermal calibration is configured correctly</b>’ by checking highest temperature object at two channels.</li> <li>2. Check if the temperature data is inconsistent with the actual temperature, the temperature may be too high.</li> </ol>	